

rev. 2018

Swisspearl fiber cement panel edge treatment


Any cut made on a Swisspearl panel needs to be impregnated by the application of an impregnation liquid, so called LUKO. Fastening holes are generally not treated neither at the factory nor in the field.

CH-8867 Niederurnen
+41 55 617 11 11

info@swisspearl.com
www.swisspearl.com

Member of the
Swisspearl Group

Impregnation of panel edges cut on building site

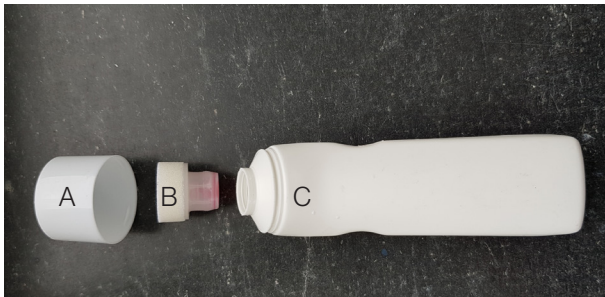

- A Cap
- B Sponge
- C Tank

Shelf life 12 months

Instructions for use

1. Cut panel in accordance with manufacturer's instructions
2. Cut edge to be slightly broken, dust to be removed with a cloth
3. Shake hand applicator well before use
4. Position hand applicator tank upwards on panel edge
5. Apply sponge at right angle to panel edge and run with moderate pressure twice along panel edge, forth and back
6. Caution: Do not allow LUKO to flow onto panel face. If it occurs, wipe it off immediately with a clean cloth towards the panel edge
7. Check that LUKO has been duly applied on whole length of edge
8. Put on the cap when interrupting the job
9. Replace sponge when worn

LUKO supplied in hand applicators to be stored and used at a minimum temperature of - 8°C (18°F).