



CS2
External Wall Insulation
Systems

Contents

Introduction

Key Product Features	4
Colours and Finishes	4-5

Design

System principle: external wall insulation system	6
Wind loading	6
Thermal performance	7
Sheathing board system application	8-9

Installation

Cavity System Installation	10
Handling and storage	11

10 Stages to installing the CS2 EWI System 12

Stage 1 - Application of Main SFS Sheathing Board	12
Stage 2 - Application of CS2 Fillets- Width of system fillets CS2 75mm	13
Stage 4 - Application of Basebead & trims	13
Stage 5 - Application of Fire Barriers	13
Stage 6 - Application of Mineral Wool Insulation boards	14
Stage 7 - Horizontal Movement Joints – As required	15
Stage 8 - Application of beads and profiles	15
Stage 9 - Application of Base Coat	15
Stage 10 - Application of Finishes	16-19

Ancillary Information

Warranties & System Durability	21
Health & Safety	22

Appendix of drawings

Introduction

CS2 External wall insulation cavity systems are extensively used on lightweight steel framed structures to satisfy the requirement for a drained cavity void behind the cladding system. The systems have multiple finishes available to create a high quality finish to meet the specifier and clients demand for an attractive building façade design. Its versatility as a cladding system really lends itself to accommodate façade designing to create a modern striking building.

The CS2 systems hold recognised third party tested certification from KIWA BDA. This confirms that the systems have undergone scrutiny in testing and have met all the requirements as fit for purpose when installed. The systems have been successfully installed onto new build high rise domestic apartment dwellings and also played a part in replacement cladding schemes to re-establish an existing high rise to conform to the latest changes in cladding above 11m in height.

The differences in the CS1 System and the CS2 system is defined by higher exposure zones where the CS2 would be selected over the CS1 system, as it has a second CS sheathing board fully supporting the insulation boards. Also CS1 insulation boards are only high density mineral wool, as they have to span the fillet centres. The CS2 system is not affected

by the main LGSF sheathing board type selection, as the CS1 system is directly fixed into the main LGSF sheathing board and as such requires pull out fixing performances that gypsum based sheathing boards are not able to provide. With these differences it offers a choice of system design that can be specified to suit the projects requirements.

When installed and maintained in accordance with SPS Envirowall's recommendations and the KIWA BDA Agreement certificate, the system will have a service life durability of at least 30 years. This service life durability can be extended to 60 years, if all fixings and fully exposed beads, trims and profiles are specified as austenitic stainless steel and the system is subject to a suitable inspection regime and is maintained accordingly.

Key Product Features

- ✓ Fully tested KIWA BDA Certified systems
- ✓ Totally Mineral wool insulation A1 board
- ✓ A1 or A2 Euro classification fire rated system solutions
- ✓ Suitable for High Rise use above 11m
- ✓ Re-clad solution
- ✓ High thermal performance
- ✓ Fully drained cavity
- ✓ Low cost cladding solution
- ✓ Fast application
- ✓ Takes cladding out of the critical path by quickly weatherproofing the building
- ✓ Service life durability of at least 30 to 60 years
- ✓ Extensive colour ranges
- ✓ High rise Brick slip finishes

Colours and Finishes

The CS2 system has textured render finishes that are available in a wide range of colours to suit the look and use of the building to meet the clients criteria for a modern façade exterior.


With modern technology we are able to bring brick slips in a lightweight mineral material up to 5mm thickness, making them ideal for higher rise applications. The manufacturing process affords a “real brick effect appearance” and excellent matching qualities to existing or new brick textures, spotting and shading which gives the finish the look of real brickwork from the past to the present.

Acrylic Brick Slips



Colours and Finishes

Top Coat Colours

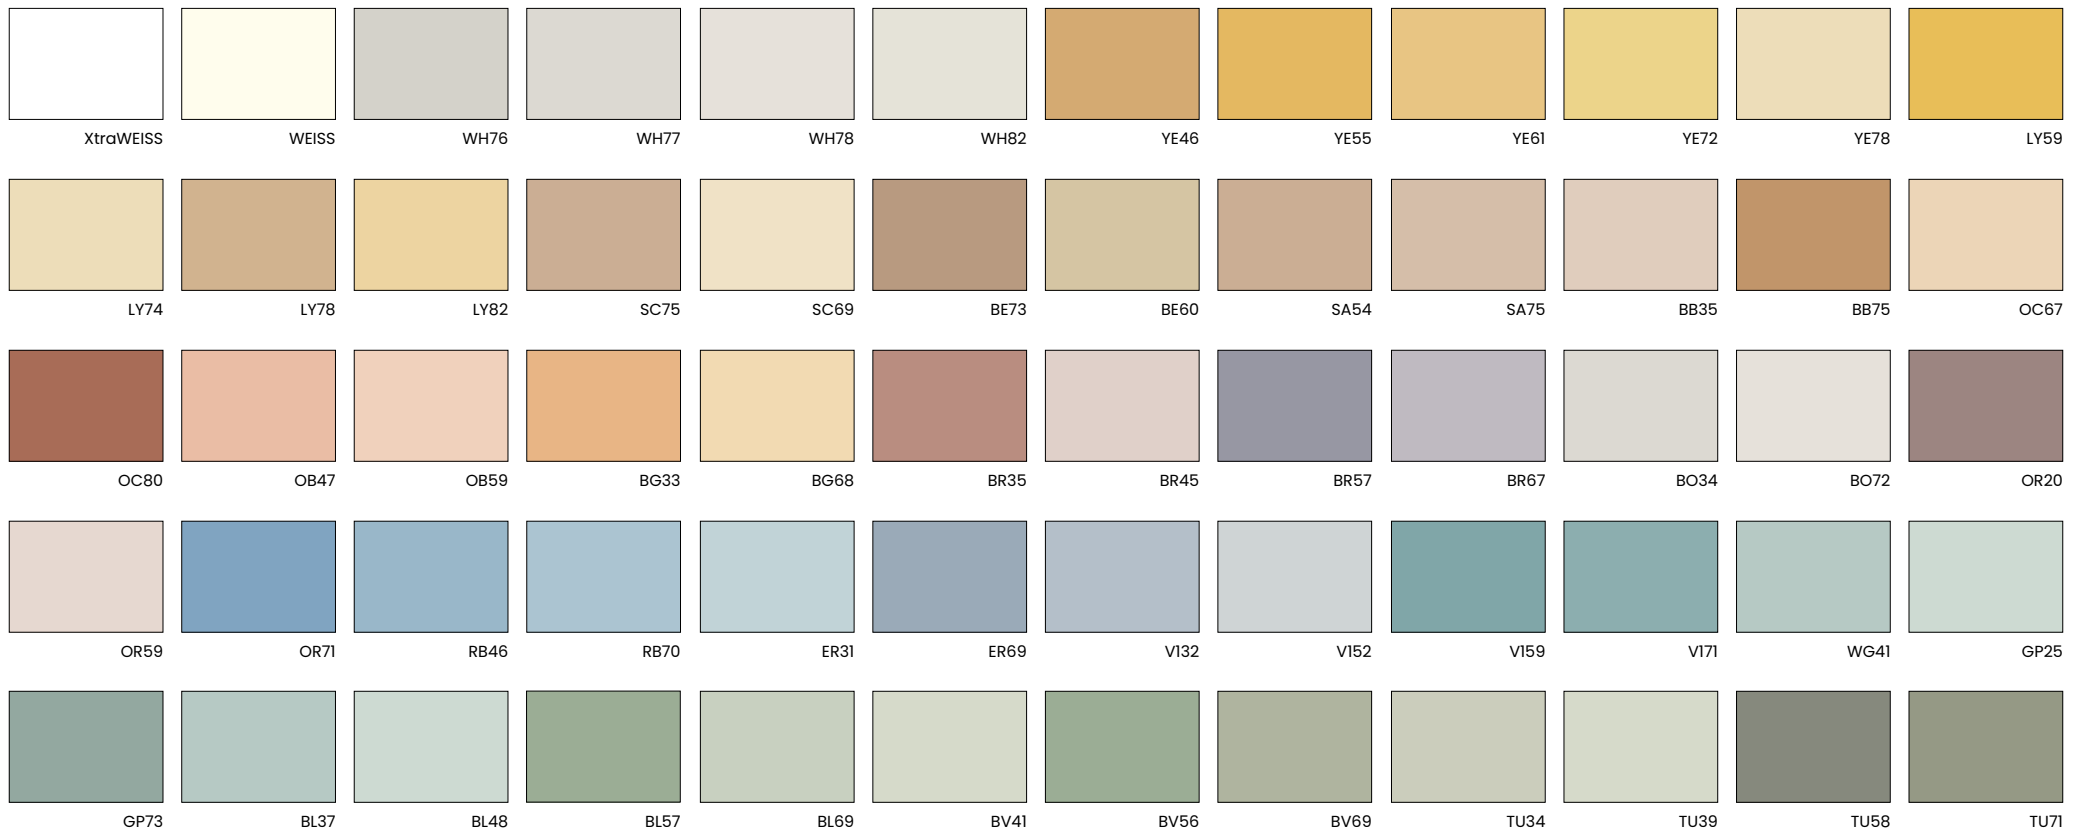

Colour swatches have been reproduced as accurately as possible, however there may be some variations due to technical, colour reproduction and render manufacture reasons. If you require an accurate swatch, please ensure you ask us for a sample of the product and colour chosen prior to commencing any works.

Design

System principle: External Wall Insulated Cavity System

CS2 systems are in principle, render cladding systems, which have a drained cavity separating the insulation boards from the sheathing board substrate. This feature meets the requirements of building insurers such as the NHBC, enabling its use extensively across high rise dwelling projects. The minimum 15mm cavity width allows the system to drain effectively through to the base of the system removing the risk of water ingress passing into the main structure.

The systems primary role is to wrap the building thermally to the latest building regulation U value targets, which it easily achieves.

The systems are much faster to install than traditional brick and block construction, which allows the client a quicker construction path to building handover to potential residents.

Fire performance: European fire classification

CS2 external wall systems use A1 fire rated Mineral Wool (Rock fibre type) only, as the insulation boarding within the system. This offers a safe and secure basis to these systems following the changes to Approved Document B (fire safety) Volume 1 Dwellings 2019 edition incorporating 2020 and 2022 amendments – for use in England and Scotland's Technical handbooks.

Behaviour in relation to fire means that both systems hold KIWA BDA third party certifications clarifying they are European classification A2-s1, d0 in accordance with BS EN 13501-1. They can

also be elevated to an A1 fire rated system by simply using our Enviromin mineral type render texture finish. Both classifications mean that CS2 systems can be installed above 11m in height and so makes them ideal for high rise apartments and re-clad projects that require a new minimum A2 fire rated cladding system to be installed as a replacement for a non-conforming existing cladding façade.

The cavity includes fire barriers as a part of its design, where at strategic locations, such as the floor levels, and perimeters of the system it has horizontal open state intumescent fire cavity barriers and around openings the Calcium silicate fillets or mineral wool (rock fibre) 200mm wide fire barriers fixed with adhesive and stainless steel fixings and stainless steel washers.

Wind Loading & fixing patterns

CS2 systems carry a robust fixing procedure to suit the buildings location and height. SPS Envirowall can conduct a Wind load calculation to establish the required fixing pattern to suit its location and height that will establish its secure fixing application. This will give clear instruction on a grid fixing pattern to follow on site to meet the wind load calculation. We will also issue a fixing pattern drawing suite that includes the sacrificial fixing pattern, main grid through the mesh fixing pattern, BR 135 fire pin fixing pattern and the CS Fillets fixing pattern.

The Mineral wool insulation boards in the CS2 system are adhesively fitted to the CS2 sheathing board and are then mechanically fixed back to the façade with 3 sacrificial fixings with 90mm oversized washers, this securely holds the boards in place prior to the main fixing grid being applied. Once the boarding is ready to receive the basecoating the main fixing pattern can be installed.

The reinforcement mesh plays a major role in this process, as the mesh is applied into the wet basecoat the fixings are then fitted through the mesh with a 60mm washer head, fixing into the CS2 sheathing board. The fixing pattern is an easy to follow grid formation with 100x100mm mesh patches applied over the washer heads to prevent cracking around the washers, it is important to still apply the additional fixings required around window and down the corners of the system where wind pressure will increase.

As required to satisfy BR 135 fire fixings a stainless-steel fixing along with a stainless-steel washer is also fixed through the wet basecoated mesh at a grid pattern of 1 per m².

Thermal performance

The mineral wool insulation element of the system allows the CS2 systems to perform thermally to meet the high standards now required in the building regulation standards, both for new build and any upgrade required in the re-clad market.

SPS Envirowall can create in-house U value calculations using specialist software that can also include a condensation risk analysis of the structure inside to out. The facility of creating a U value offers our specifiers the opportunity to establish the project thermal target requirements early in the design stages.

Drained Cavity Facade

As a technical requirement of major building insurers, the CS2 cavity based systems offer the solution for the specifiers, all inclusive of an A2 fire rated system. The 15mm A1 rated vertically orientated CS fillets form the spacers to create the drained cavity to meet this requirement. To ensure water draining down and out of the systems does not get trapped at window/door heads the system has drainage channels positioned in the cavity diagonally, spanning past the openings 150mm to allow the water to continue its journey out and away from the inner leaf of the LGSF construction.

CS A1 Fillets: Suitable sheathing boards

The CS2 fillets are positioned vertically along the façade to space the rest of the system away from the façade in order to create the minimum 15mm cavity. The fillets are set at 600mm centres and are always fixed through the main sheathing board into the steel framing behind and never just into the sheathing board alone.

Design

Sheathing board and system Application

SPS Envirowall EWI system accreditation does not state a specific sheathing board to avoid restrictions of use in application. In many applications SPS Envrowall technical services do not have control or influence over the specification of the sheathing board and subsequently can only set minimum stipulations of the sheathing board to achieve the required performance values for the system.

In the instances of a sheathing board already being specified or already installed, as with a re-clad project, it is a requirement that the specification complies with to the below specification extract taken from relevant accreditation section to ensure appropriate minimum design guidance and application of use.

Performance and structural integrity

KIWA BDA Certificate BAW-18-075-S-A-UK FlexiSlip – KIWA BDA Certificate BAW-18-041-S-A-UK Render- KIWA BDA Certificate BAW-18-092-S-A-UK SpeedySlip

Weather Resistant to Category A or B in accordance with BS EN 12467

Have a bending strength of Class 2 or 3 in accordance with BS EN 12467

Achieves class A1 or not less than A2-s1-d0 in accordance with BS EN 13501-1

Minimum pullout resistance of no less than 0.7kN per mechanical

fixing, excluding the subframe, in line with EOTA TR 051 and EAD 330196-01-0604.

As well as this the boards are required to be structurally sound and in suitably good condition to receive the EWI system proposed and associated fixings, in line with the agreed fixing pattern.

Confirmation from the manufacturer should be sought to ensure the correct fixing pattern has been used and a structural engineer consulted if there is any doubt about the boards' integrity.

Confirmation should also be from the manufacture of the sheathing boards in relation to the jointing application (weatherization and air-permeability) and any anticipated movement allowances and board edges for the board itself.

Fire performance

It is also a point of note that the fire performance of the system will only be valid over a substrate when the system is installed, bonded, and mechanically fixed or only mechanically fixed, to any end use substrates with a density at least 450 kg/m³ and any end use substrate of classes A1 and A2-s1,d0.

The preferred sheathing boards for use with the SPS Envirowall systems would be RCM Y-Wall or RCM Multipurpose as both satisfy the above criteria and have been heavily tested both with and without the system in question.

The sheathing board is not warranted in our EWI systems as they do not form part of the system components yet will need to be deemed acceptable prior to the installation of the SPS system.

Movement Joints

With regards to movement joints in an insulated render system – these are required where there is a change in the substrate types that leads to shear movement such as masonry to timber or concrete to SFS or where on a structure the deflection exceeds $L/360$ or 15mm (whichever is greater). Otherwise, the insulated render system itself does not require movement joints unless the substrate requires one to be present through the whole wall section to the outside face, determined by the project structural engineer or unless it is a brick slip finish being applied to the EWI system.

Breather Membrane

There is no requirement within our CS2 systems for the use of a breather membrane as long as the sheathing boards are appropriately sealed to allow for continual flow of water drainage. There may be a requirement from the sheathing board manufacturers or the project specifiers to install a breather membrane as good practice.

Installation

CS systems are principally installed in a similar way, the difference being the CS2 system has a secondary supporting sheathing board and as such the fillets are 75mm wide, whereas the CS1 requires a wider supporting fillet of 100mm having no secondary supporting sheathing board, hence only High density mineral wool insulation is allowed to be used in the CS1 system.

The fillets are installed vertically at 600mm centres to mirror the SFS framing which they are fixed into using wing tip self-drilling self-tapping countersunk head screws.

The aluminium basebead with a drained vent strip behind is fixed along the damp proof course at 300mm centres.

The drainage channels are fitted diagonally across the openings passing over the sides by 150mm.

Fire barriers are fitted at floor levels and base level using horizontal intumescent strip open state cavity barriers fixed at 250mm centres with stainless-steel fixings. Full depth mineral wool fire barriers are fitted around windows or used vertically at compartment zones with adhesive and stainless-steel fixings and washers at maximum 500mm centres. Using the calcium silicate fillets around openings and the edges of the system are acceptable as a cavity fire barriers at these locations.

CS2 Dual Density or High Density mineral wool insulation boards are fixed in a stagger bond pattern with 3 sacrificial fixings across the centre of the boards with an additional 90mm oversized washer to prevent pull over of the insulation boards prior to the main fixing grid being installed. The 9mm or 12mm CS2 sheathing board is installed over the 75mm wide fillets and the Dual density mineral wool insulation boards are bedded onto the CS2 sheathing board and fixed with the sacrificial fixings.

CS2 systems follows the fixing process of basecoating then applying the reinforcement mesh into the upper third of the basecoat layer and whilst still wet the main fixing grid pattern is applied through the mesh into the sheathing board behind. At this point as required to satisfy BR 135 fire fixings a stainless-steel fixing along with a stainless-steel washer is also fixed through the wet basecoated mesh at a grid pattern of 1 per m². These washer heads are covered over with 100mm x 100mm mesh patches bedded in with basecoat. A slurry layer of basecoat is applied over the fixings to a smooth or textured finish depending on the outer finish specified.

Handling & Storage


CS2 mineral wool insulation boards should be stored undercover and off the ground to prevent water ingress into the boards.

Site storage of SPS Envirowall materials

Site storage and protection of SPS Envirowall materials must be in accordance with the manufacturer's instructions. It is essential to keep the render and liquid based materials out of high and low temperatures, as this could cause issues with the products application and performance.

Product application weather conditions

Application of the system must only be carried out in suitable weather conditions. SPS Envirowall renders, and adhesives must not be applied in rain, fog, or mist, at temperatures below 5°C or above 30°C or (application may start +3°C and rising and cease at +5°C and falling) or if exposure to frost is likely to occur during drying. SPS Envirowall renders must not be applied to saturated, or frost bound walls and insulation boards. In sunny weather work should commence on the shady side of the building and be continued round following the sun to prevent the rendering drying out too rapidly.

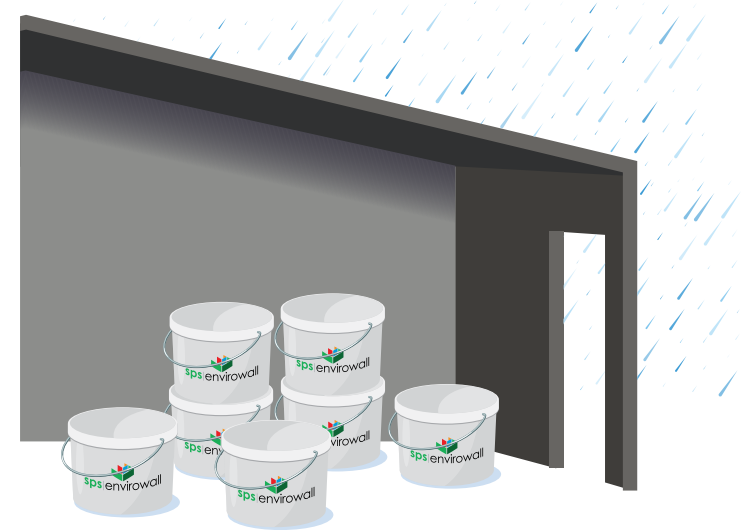

10 Stages to CS2 System Installation

- Stage 1** ▶ Fitting Main sheathing board
- Stage 2** ▶ Application of CS fillets and CS2 sheathing board
- Stage 3** ▶ Fit drainage channels
- Stage 4** ▶ Fit Basebead
- Stage 5** ▶ Fit Fire Barriers
- Stage 6** ▶ Application of Mineral Wool insulation boards
- Stage 7** ▶ Fit Movement bead profiles
- Stage 8** ▶ Application of beads and Profiles
- Stage 9** ▶ Apply basecoat layer with reinforcement mesh
- Stage 10** ▶ Application of Finishes

Stage 1 - Application of Main SFS Sheathing Board

1. Store Specified Sheathing Boards in a dry atmosphere and off the ground.
2. Do not drag the Specified Sheathing Boards off the pallet.

3. Lift Specified Sheathing Boards clear of the pallet to prevent damage. Always carry or lift the Specified Sheathing Boards on their sides with 2 persons.

4. Do not install cracked or damaged Specified Sheathing Boards unless the damaged sections are removed by using the board as cut pieces.

5. Specified Sheathing Boards can be fixed horizontally (landscape) or vertically (portrait)

6. All Specified Sheathing Boards vertical edges must be located over SFS studs

7. Specified Sheathing Boards must have minimum 2mm maximum 5mm gap at joints

8. Fix Specified Sheathing Boards back through the into the SFS studs using fixings as per project specification fixings at maximum 300mm centres vertically and 600mm centres horizontally. Fixings to be minimum 15mm in from Specified Sheathing Boards edge.

9. Seal the board joints with a fire rated mastic and if required taped and liquid joint sealer.

Please refer to Fixing Pattern drawings for visual representation.

As required by the project designers or the sheathing board manufacturers a Breather Membrane should be installed at this stage.

Stage 2 - Application of CS2 Fillets- Width of system fillets CS2 75mm

The CS2 fillets are vertically fixed through the sheathing board into the LGS frame using wing tip self-drilling self-tapping screws located centrally down the fillets at 600mm centres and never just into the sheathing board alone. The fillets are cut through at floor levels and fixings are located to ensure the two floors are not “locked” together and to allow the passage of the open state intumescent strip to pass horizontally uninterrupted around the floor levels. They are also cut through at the base of the system and any other locations that fire barriers are positioned. Fix CS2 9mm/12mm sheathing boards over the fillets using wing tip self-drilling self-tapping screws as specified with fixings at 300mm centres through the fillets into the steel frame.

Stage 3 - Application of Drainage Channels

PVC or Aluminium profiled channels are installed diagonally at a 1 degree angle, to the depth of the cavity and oversailing the window head plus any fire barriers around the opening by 150mm, to capture water and divert it around the heads of openings. They are fixed at 300mm centres and the back leg is sealed to ensure any water flows into the channel. The CS fillets are cut through to allow the angled drainage channel to be fixed onto the face of the main sheathing board.

Stage 4 - Application of Basebead & trims

Aluminium Basebead Application

Apply the drainage profile along the back edge behind the aluminium base profile at the Damp Proof Course level and not below, using specified zinc coated screws at max. 300mm centres ensuring that the base profile is always fixed in the last plug slot on

both ends of the plate. Unevenness in the wall surface should be overcome using packing shims.

At building corners, cut and mitre the base profile to size. Join mitred edges with basebead connection clips. Apply the clip on PVC bead with mesh ready to receive the basecoat application.

Stage 5 - Application of Fire Barriers

Open State Cavity Barriers

Using the appropriate size specified open state intumescent strip fire barrier located at floor levels and base of system, or any termination of the CS systems in a horizontal position. The intumescent strips are mechanically fixed at 250mm centres using a stainless-steel fixing suitable for the substrate type. At the external corners, ensure that the intumescent strip passes across the cavity on one side of the corner and touches the back of the insulation boards, this will ensure intumescent closure at the far corner junction of the two facades.

Full Depth Cavity Barriers

Compartmentation – Party Wall Junctions : Vertical fire barriers at compartmentation zones can be achieved by using a full CS system depth 200mm wide section of mineral Wool (Rock fibre) insulation board, closing off the cavity. Using Enviroweb adhesive fully covering the back of the mineral wool fire barrier applied to the face of the main SFS sheathing board, along with stainless-steel fixings with stainless-steel washers at maximum of 500mm centres or a minimum of two per shorter sections of board.

Openings & Outer Termination Perimeters of CS Cavities

Using the Calcium Silicate (Y Wall) CS fillets as cavity barriers around windows and doors/apertures, including the sills, mechanically fix the CS fillets all around the openings. Use the same procedure at the termination edges of the CS cavity and along the top of the system, at soffit line and parapet to close the cavity.

Stage 6 - Application of Mineral Wool Insulation boards

1. MW Insulation should be stored in original packaging and off the floor or in a dry environment.

2. Base track for MW Insulation must have drainage holes to allow trapped moisture to escape post completion of finish coatings.

3. Insulation Adhesive Application

Supply, mix and apply Envirobed adhesive in accordance with the manufacturers printed instructions.

Work in Envirobed adhesive using a thin pressed trowelled, coat across the whole surface of the insulation board and then apply a notch pattern with a 10-12mm notched trowel.

Ensure the Envirobed adhesive covers the whole surface of the prepared board with combed method

4. Ensure minimum of 70% coverage on the ribbon method and that the adhesive is applied in a continuous band around all sides of the back of the board, to ensure no cavity can exist.

5. Apply the insulation boards firmly against the wall ensuring they are in contact with the adjacent board leaving no gaps. No insulation boards measuring less than 200mm in height or width should be used L-Shaped insulation boards to be installed at the corners of all window/door or any type of aperture on the façade. boards to be fixed using stagger bond pattern with alternate interlocking up all corners of building and apertures.

Mineral Wool Insulation boards are fixed with the following pattern:

1. Minimum of 3 fixings across the centre line of the MW Insulation boards to offer temporary securement. Please see project specification for exact fixing number based on site wind loads.

2. Primary fixings are secured through the wet base coat and reinforcing mesh in a maximum 400 x 400mm grid pattern in line with the project wind load calculation. These primary fixings through the mesh layer must be covered with a 100 x 100mm scrim patch. Please see project specification for exact fixing pattern / grid based on site wind loads.

3. All calculated loadings for the fixings are based on them being secured back to the Sheathing Board. If they penetrate the inner sheathing board this does not invalidate the wind load data.

Stage 7 – Horizontal Movement Joints – As required

1. Check elevation drawings for location of movement joints
2. If required, they are to be installed following the below instructions:
 - Ensure the insulation is stopped short above and below to create a gap size as required for the expected level of movement
 - Install SPS Expanding Sealing Tape into this joint at the leading edge of the insulation
 - The movement joint is supplied in two parts, a lower section designed to slip into the upper 'h' section
 - The upper and lower sections should be installed to the surface of the insulation using EnviroRend base coat prior to the main application of the reinforced base coat. Care should be taken to ensure the moving parts are kept clean and free from mortar and the gap created is at least the same as the expected level of movement.

Stage 8 – Application of beads and profiles

Set all corner beads, stop beads, APU beads and any surface mounted movement beads to line and level bedded on with basecoat prior to the main basecoating layer being applied.

Stage 9 – Application of Base Coat

1. No work on bonding, pointing and mixing of any adhesive preparations should proceed on site during a time when the temperature is below 50C or above 300C or if exposure to frost is likely to occur during drying. SPS Envirowall renders must not be applied to saturated, or frost bound walls and insulation boards. In sunny weather work should commence on the shady side of the building and be continued round following the sun to prevent the rendering drying out too rapidly. Do not apply material in rain, fog or mist.
2. EnviroRend base coat should not be applied to wet insulation boards.
3. Using a notched trowel apply EnviroRend base coat to the MW Insulation ensuring it bites into the fibres of the MW Insulation. Total thickness of EnviroRend base coat is 3 to 5mm including slurry coat.
4. Whilst EnviroRend base coat is wet, install High Performance Mesh with 100mm overlapping joints.
 - At corners of all opening install minimum 300 x 500mm stress patch at 45 degrees to main mesh layer
5. Primary insulation fixings must be installed through the mesh whilst the base coat is still wet as per section 3, in line with project fixing pattern, typically maximum 400 x 400mm grid pattern.

6. All fixing heads covered with a 100 x 100mm prior to application of final slurry coat and allowed to dry.

7. Once set, apply final slurry coat at 1 – 2mm thick (total build up no more than 5mm) over High Performance Mesh and float ready for the application of the finish

- a. High Performance Mesh must be in the top third of the base coat

Stage 10 – Application of Finishes

EnviroSil silicone render

1. No work on bonding, pointing and mixing of any adhesive preparations should proceed on site during a time when the temperature is below 50C or above 300C or if exposure to frost is likely to occur during drying. SPS Envirowall renders must not be applied to saturated, or frost bound walls and insulation boards. In sunny weather work should commence on the shady side of the building and be continued round following the sun to prevent the rendering drying out too rapidly. Do not apply material in rain, fog or mist.

2. Ensure EnviroRend reinforcing base coat has cured and inspect for surface contamination.

3. Remove any surface contamination if found and if required, brush the façade to remove surface dust.

- a. Using a brush or roller apply EnviroSil silicon primer (tinted when using non-pastel colours) ensuring an even and consistent coating is achieved. Must be touch dry prior to the application of the main EnviroSil silicon render finish.
- b. Using a plastic or stainless-steel float, apply a tight coat of EnviroSil silicon render. Using consistent pressure, ensure any excess material is removed prior to texturing taking the EnviroSil silicon render down to the specified grain size

4. Using a plastic float, lightly roll the float in a circular or figure of 8 pattern to roll the texture ensuring no bald spots are created

5. Any excess material on the float must be removed to ensure a clean consistent finish. This excess material must not be used again as there will be no grain

6. It is key to ensure all operatives use the same float type, thickness and are all texture in the same direction and pattern to create an even consistent finish

Application of EnviroMin Mineral Render

1. No work on bonding, pointing and mixing of any adhesive preparations should proceed on site during a time when the temperature is below 30C or above 250C or if exposure to frost is likely to occur during drying. SPS Envirowall renders must not be applied to saturated, or frost bound walls and insulation boards. In sunny weather work should commence on the shady side of the building and be continued round following the sun to prevent the rendering drying out too rapidly. Do not apply material in rain, fog or mist.

2. Ensure EnviroRend reinforcing base coat has cured and inspect for surface contamination.

3. Remove any surface contamination if found and if required, brush the façade to remove surface dust.

4. Using a brush or roller apply Silicon Primer (tinted when using non-pastel colours) ensuring an even and consistent coating is achieved. Must be touch dry prior to the application of the main EnviroMin Mineral Render finish.

5. Using a paddle mixer, mix one 35kg bag of EnviroMin Mineral Render with 6.5 to 7 litres of cold clean water for 5 minutes. Leave to stand for 2 minutes and then whisk again for 2 minutes ensuring a consistent mix and grain dispersion.

6. Using a plastic or stainless-steel float, apply a tight coat of EnviroMin Mineral Render. Using consistent pressure, ensure any excess material is removed prior to texturing taking the EnviroMin Mineral Render down to the specified grain size

- Using a plastic float, lightly roll the float in a circular or figure of 8 pattern to roll the texture ensuring no bald spots are created
- Any excess material on the float must be removed to ensure a clean consistent finish. This excess material must not be used again as there will be no grain
- It is key to ensure all operatives use the same float type, thickness and are all texture in the same direction and pattern to create an even consistent finish

Application of Speedy Slip adhesive and slips FlexiSlip follows same install path

1. No work on bonding, pointing and mixing of any adhesive preparations should proceed on site during a time when the temperature is below 50C or above 300C or if exposure to frost is likely to occur during drying. SPS Envirowall renders must not be applied to saturated, or frost bound walls and insulation boards. In sunny weather work should commence on the shady side of the building and be continued round following the sun to prevent the rendering drying out too rapidly. Do not apply material in rain, fog or mist.

1. Ensure EnviroRend reinforcing base coat has cured and inspect for surface contamination.
2. Remove any surface contamination if found and if required, brush the façade to remove surface dust.
3. Mark out the area to be covered with the Speedy Slip flexible brick slips evenly with chalk lines and agree brick pattern bond style and areas for cut bricks with the client.

Use existing lines such as windows and door lines as starting points when marking out the height and bond.

Consider the use of soldier coursing at the base and head of the façade if it is not to brick dimensions

4. Mix Speedy Slip Combination Bedding Adhesive and Pointing Mortar thoroughly within its tub prior to application
5. Apply using a 4mm notched trowel with the notches running perpendicular to the length of the brick tile

Apply an area no more than can be covered in 30 minutes

6. Apply the Speedy Slip Flexible Brick Tile to the Speedy Slip Combination Bedding Adhesive and Pointing Mortar by floating and pressing into place

In colder weather it is advisable to store the Speedy Slip Flexible Brick Tile in a heated unit to aid application and reduce the risk of breakages

Speedy Slip Flexible Brick Tile can be cut using scissors or a

sharp Stanley knife

7. Once Speedy Slip Flexible Brick Tiles have been applied the pointing process should begin immediately. Using a damp 10mm brush, spread the Speedy Slip Combination Bedding Adhesive and Pointing Mortar between the Speedy Slip Flexible Brick Tiles ensuring all joints are pointed evenly.


Ensure mortar is pointed consistently, i.e., all bed joints first or all perp joints first

Speedy Slip Combination Bedding Adhesive and Pointing Mortar must fully seal all the edges of the Speedy Slip Flexible Brick Tiles. Inspect carefully, remove and replace any tiles that are not fully sealed.

- Corners are supplied preformed as Speedy Slip Pistol Tiles and fixed using the same method as the Speedy Slip Flexible Brick Tile.
- Ensure the slips are clean of any adhesive/mortar material before it is allowed to set, as this cannot be cleaned off once it has set.

Observation Application Points

1. No work on bonding, pointing and mixing of any adhesive preparations should proceed on site during a time when the temperature is below 50C or above 300C or if exposure to frost is likely to occur during drying. SPS Envirowall renders must not be applied to saturated, or frost bound walls and insulation boards. In sunny weather work should commence on the shady side of the building and be continued round following the sun to prevent the rendering drying out too rapidly. Do not apply material in rain, fog or mist.
2. Inspect the EnviroSil silicon render at completion of every 10m² to ensure an even consistent finish is achieved.
3. Keep re-mixing the material in the tubs to prevent material skinning on the surface.

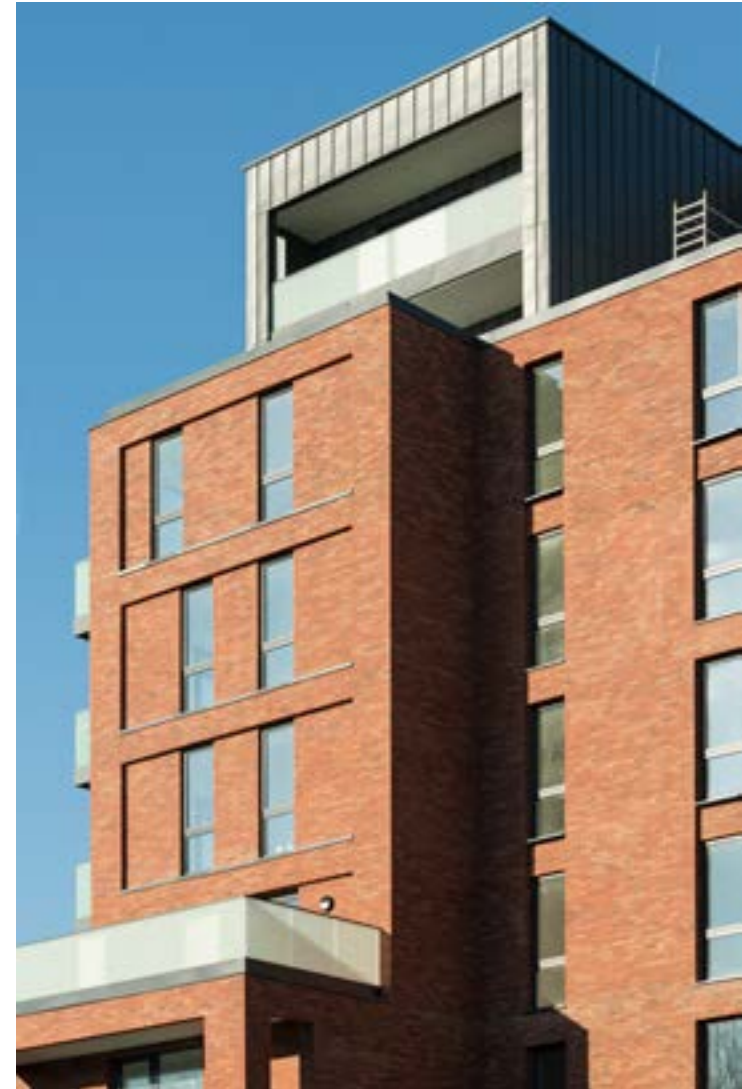



Warranties & System Durability

SPS Envirowall offer a 10 year warranty on materials used in the CS1 systems. To support this a written request is required pre-start on site to confirm that a warranty will be required at the end of the installation. This will be backed up with regular site inspections by our experienced Site Inspectors who will audit the site with a written report including stage photographs. It will be the responsibility of the installing contractor to support this process with photographic evidences of the key installation stages in between our site inspections. All materials for the system require to be procured from SPS Envirowall to ensure a warranty can be issued.

The systems are confirmed within our KIWA Certifications as when installed and maintained in accordance with the agreement holders recommendations and the agreement certificates, the system will have a service life durability of at least 30 years. The service life durability can be extended to 60 years, if all fixings fully exposed beads, trims and profiles are specified as austenitic stainless-steel and the system is subject to a suitable inspection regime and is properly maintained accordingly.



Health & Safety

The fibres as used in SPS Envirowall renders may irritate the skin. Protective clothing should be worn to avoid contact with both dry, unmixed material and with wet mortar. Great care must be taken to avoid contact with eyes.

When mixing SPS Envirowall materials a filter respirator should be worn.

Where excessive concentrations of dust may accumulate the measures defined in the Health and Safety Executive publication EH40/2005 Workplace exposure limits for unlisted substances should be followed. Note that EH40 is published annually, and the current edition should be followed. Any concerns regarding application, use and disposal of products please request the relevant MSDS data sheets.



For more than 20 years, Benx has been a leading innovator in the facades sector. We are constantly refining our portfolio of products, systems and services in line with our customers' requirements. In recent years, this has meant an increased focus on supplying fully certified systems and supporting modern methods of construction.

We now offer certified façade systems for most new build, retrofit and reclad project types, and, whether you are a cladding installer, a fully-fledged volumetric manufacturer or are simply seeking to reduce on-site content, we can help.

We offer you more choice whilst reducing complexity and risk. We believe our approach is the future of façades.

At our core, Benx offer a wide and varied range of building boards, providing a solution for all structural applications. From timber to steel frame, concrete to modular, high to low rise, internal to external linings and buildings with high weather exposure, we offer a solution.

Benx group are a market leader in providing innovative products and solutions; finding the latest technology is an ethos which lies at the very heart of our business and one which separates us from the competition. At the forefront of industry research and development, we constantly strive to innovate and develop our range of solutions. By providing a complete solution, from a single supplier, we can help reduce costs, time complexity and risk.

Benx work openly in collaboration with clients and supply-chain partners to mutual benefit to ensure that the most efficient and appropriate solutions can be found for every project.

At Benx we take great care to ensure that we offer a complete service, from initial advice through to delivery. Our experienced and complimentary technical support team can provide advice at all stages of your project to help you achieve your vision. We offer a service which is flexible and meets your needs whilst remaining competitive. A fully integrated fabrication service allows customers to order both boards and façades to exact size in order to reduce construction time, minimise wastage and improve environmental impact. Benx's products are specified for use in external façades, fire protection, acoustic, airtightness and decorative applications amongst other uses.



Tel: **0845 519 8641**

Email: sales@benx.co.uk

www.benx.co.uk


Disclaimer

By using or accessing the brochure, you agree with the following Disclaimer. Benx Limited ('the Company') reserves the right to terminate, revoke, modify, alter, add and delete any of the information in the brochure. The Company shall be under no obligation to notify the user of the amendment to the contents of the brochure. Computer generated images, walkthroughs and render images used on this brochure are the artist's impression and are an indicative of the actual designs.


The information in this brochure is presented as general information and no representation or warranty is expressly or impliedly given as to its accuracy, completeness or correctness. It does not constitute part of a legal offer or contract. While every effort has been made to ensure its accuracy, this brochure may unintentionally include inaccuracies or errors. The user must verify all the details and specifications independently with the Company prior to concluding any decision to purchase or use the Company's products.

In no event shall the Company be liable to the user or any third party for damages, losses and causes of action (including but not limited to negligence), errors, injury, whether direct, indirect, consequential or incidental, suffered or incurred by any person/s or due to any use and/or inability to use this brochure or information, action taken or abstained through this brochure. While every effort has been made by the Company to ensure that information in the brochure is up to date, accurate and correct, the users are requested to make their independent enquiry before relying upon the same.


CS2 - Base Detail with Flashing cover

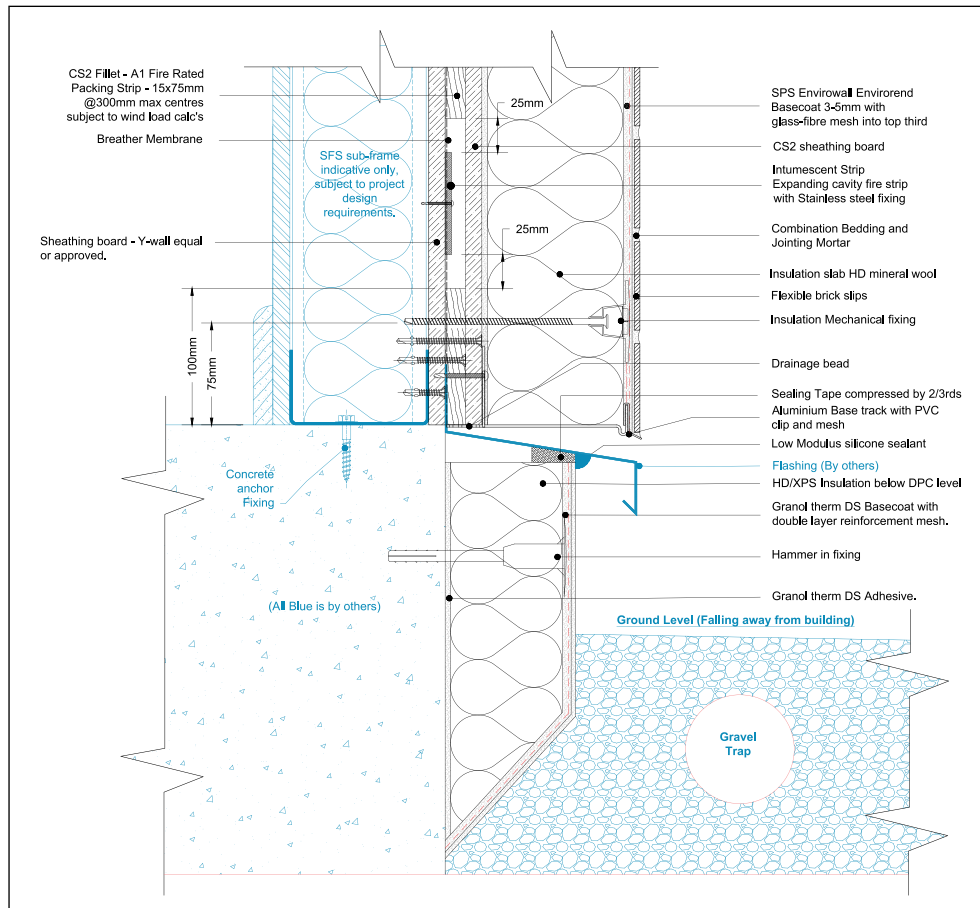


CS2 - Base Brick Detail with SFS overhang and Flashing

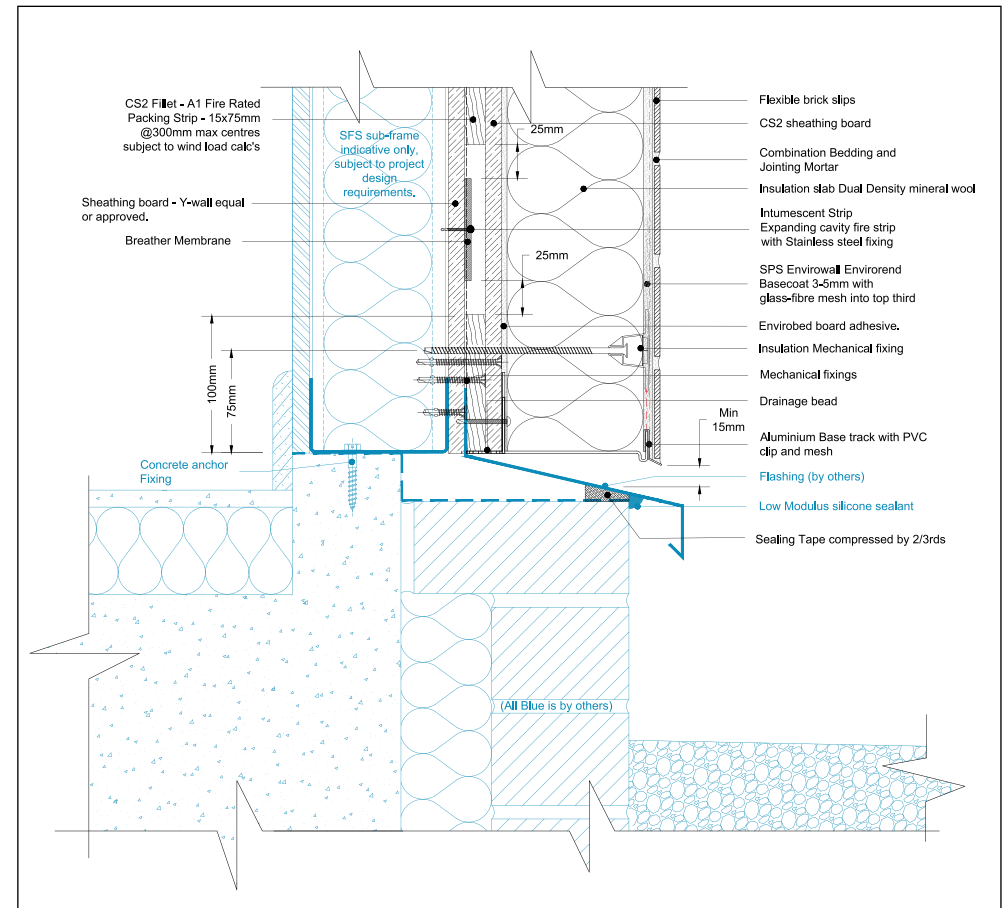


CS2 - Base Brick Detail with Flashing cover

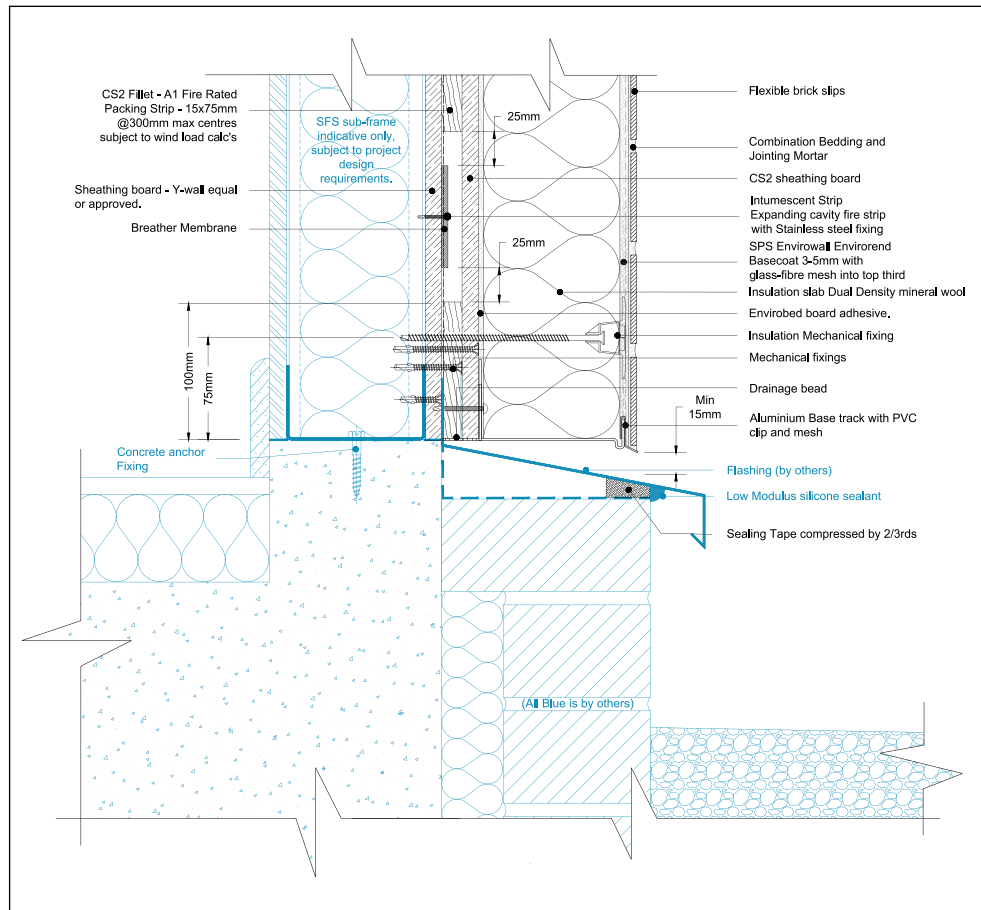


CS2 - Internal Corner

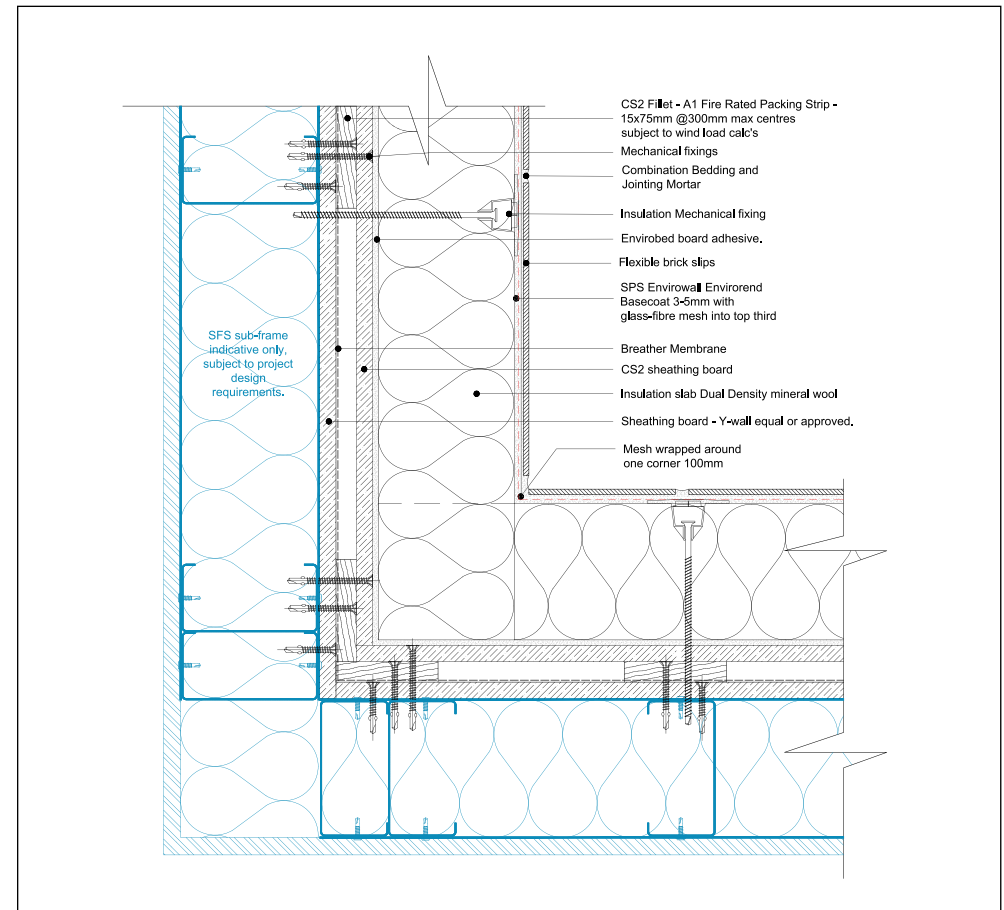


CS2 - Internal Corner with movement joint bead

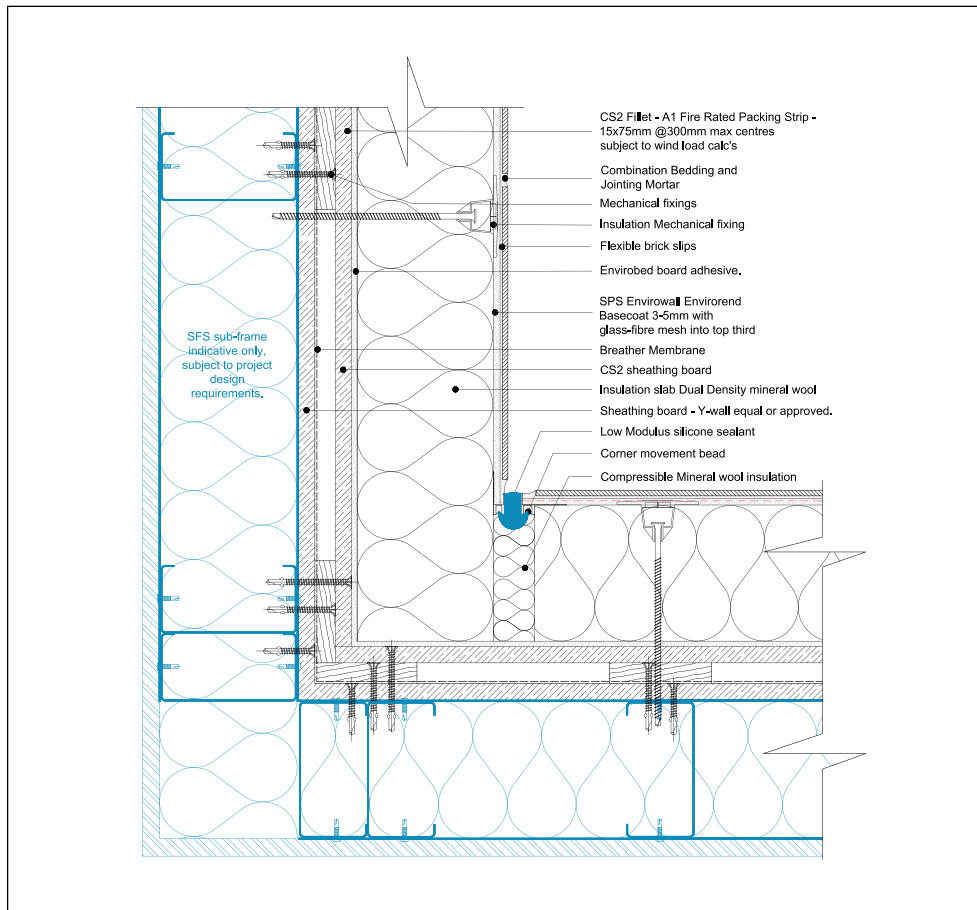


CS2 - External Corner

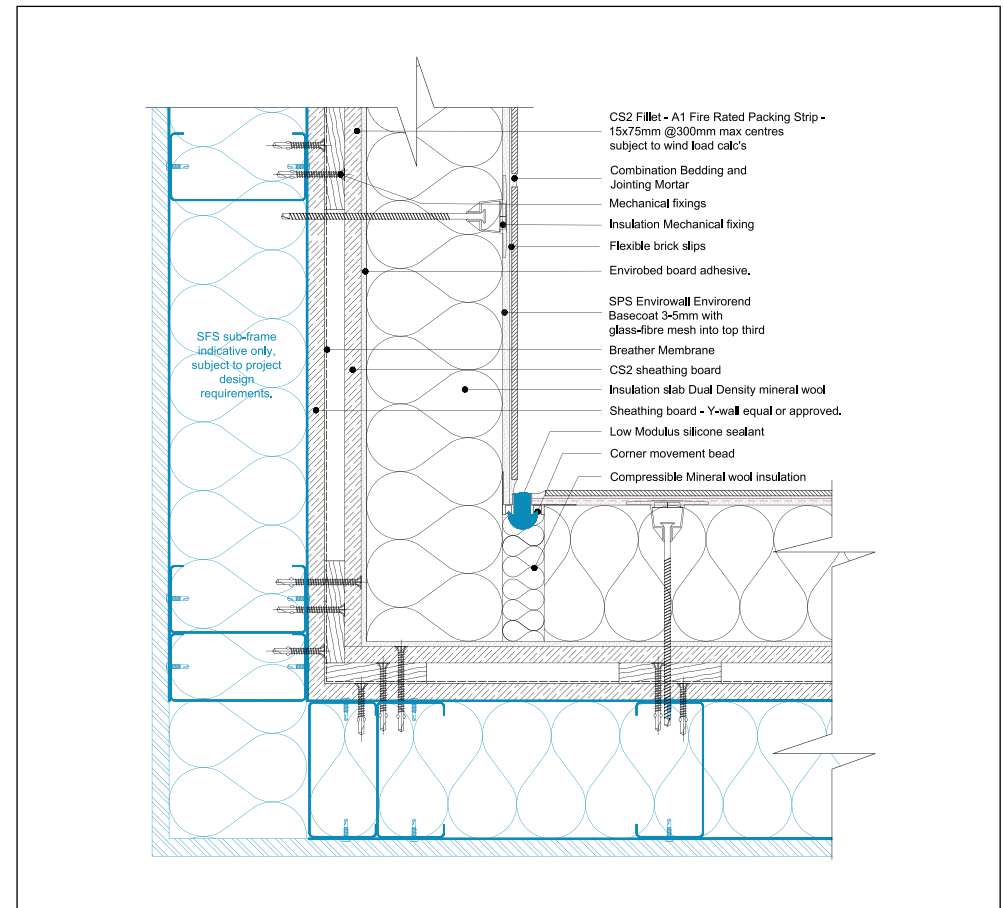


CS2 – Brick work Abutment joint

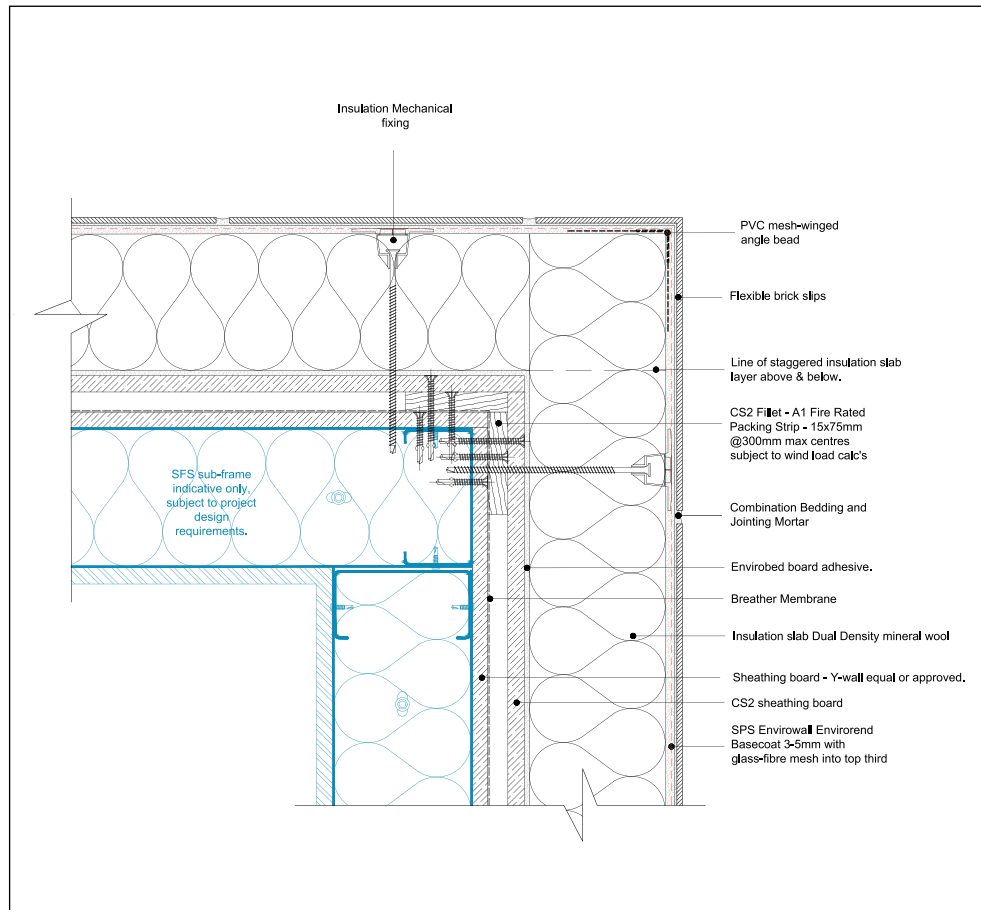


CS2 – Abutment joint with other cladding

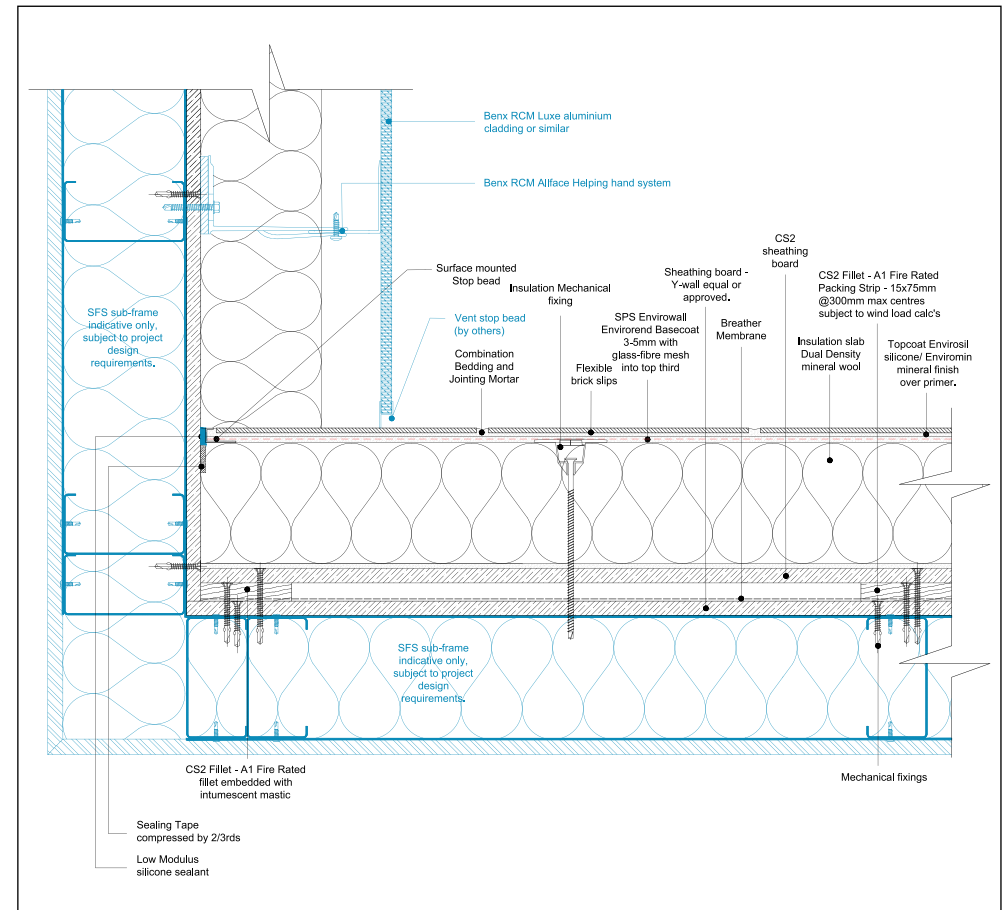


CS2 - A Joint with other cladding system

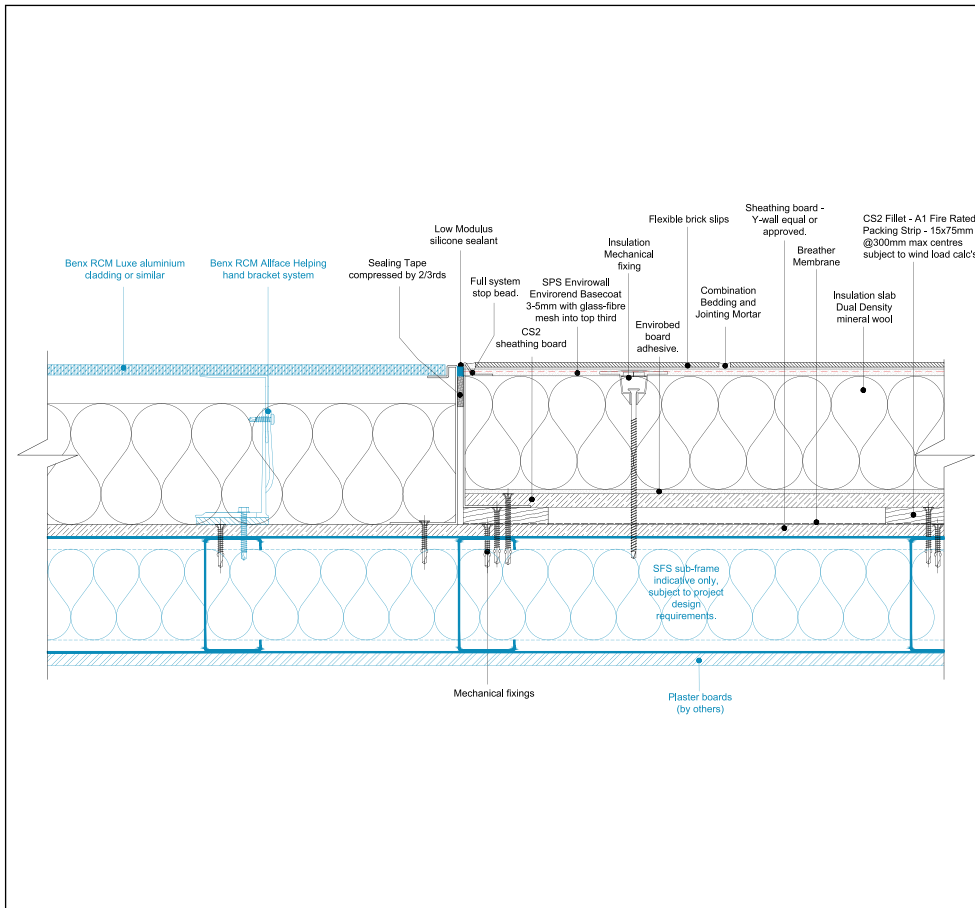


CS2 - Horizontal change of finish render and flexible brick slip

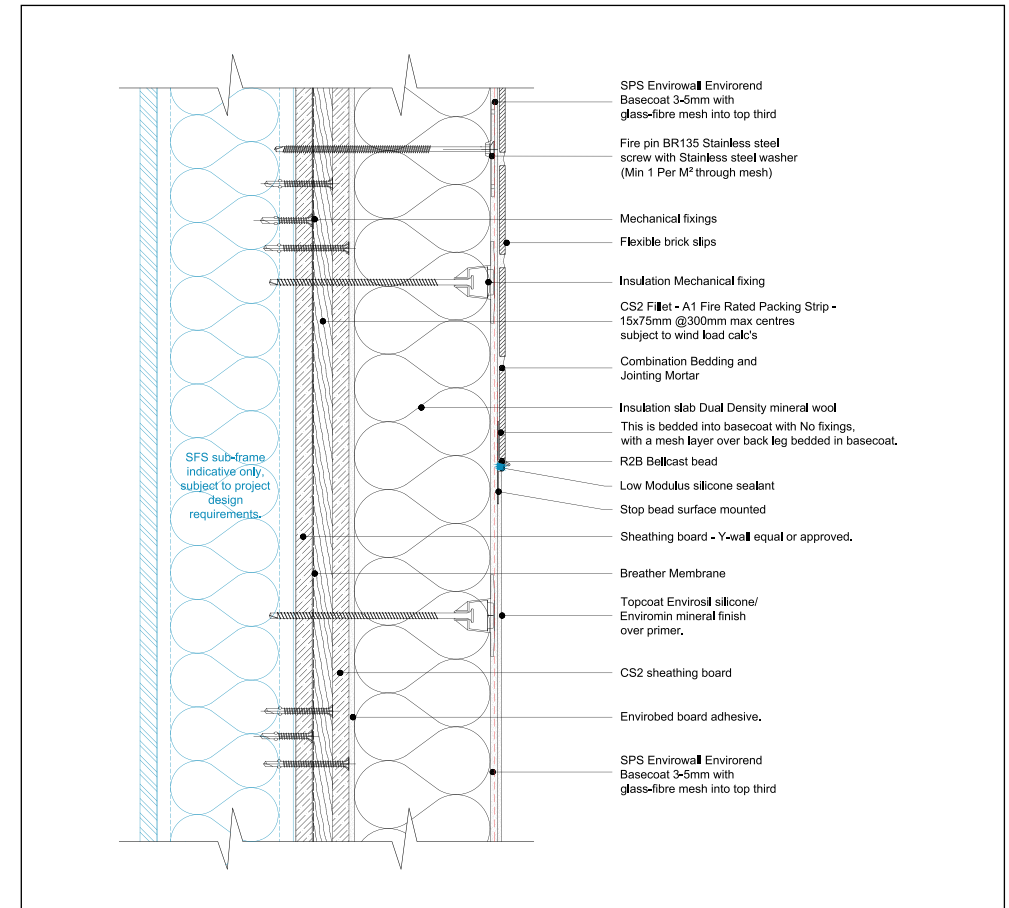


CS2 - Floor slab edge detail with firebreak, No deflection zone

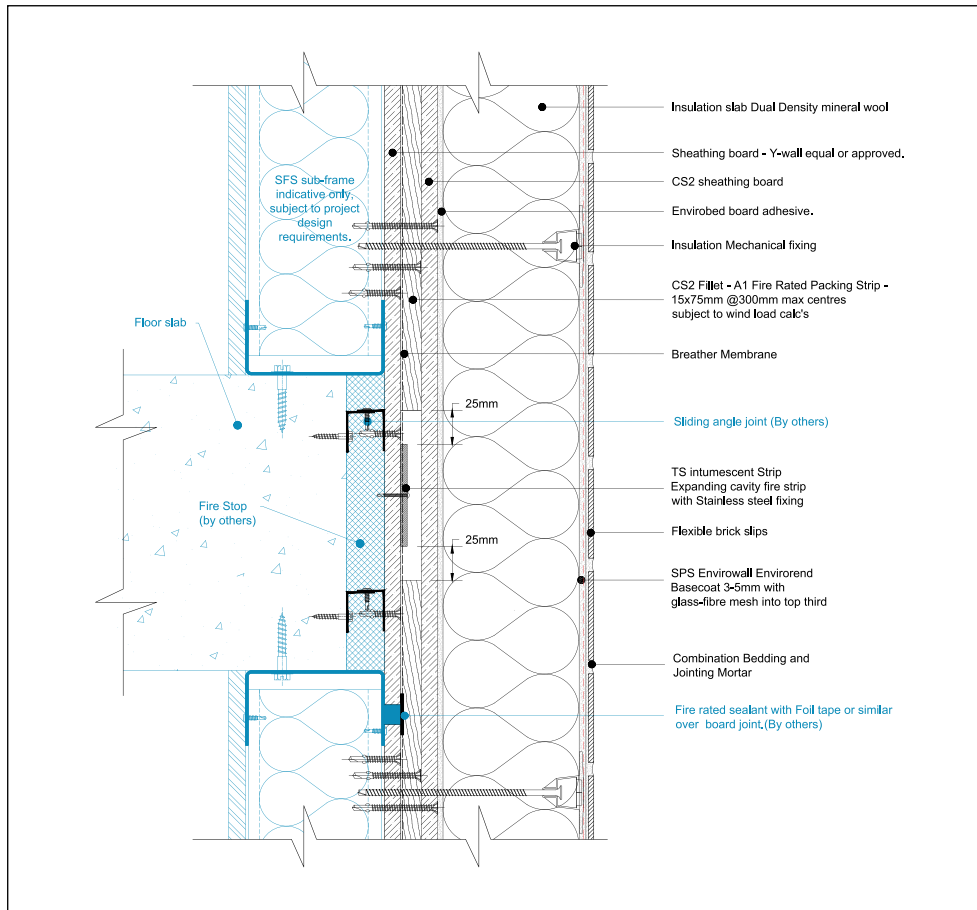


CS2 - Recessed slab edge with movement joint

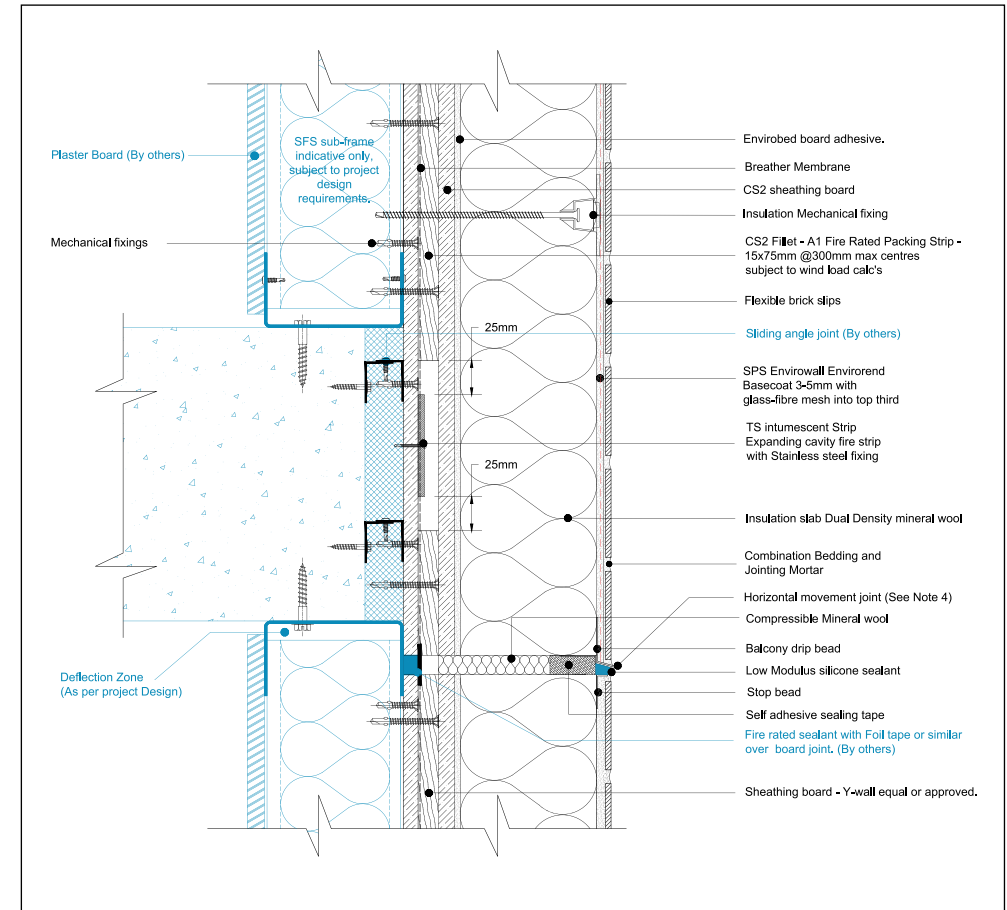


CS2 - Flush floor slab edge detail with movement joint

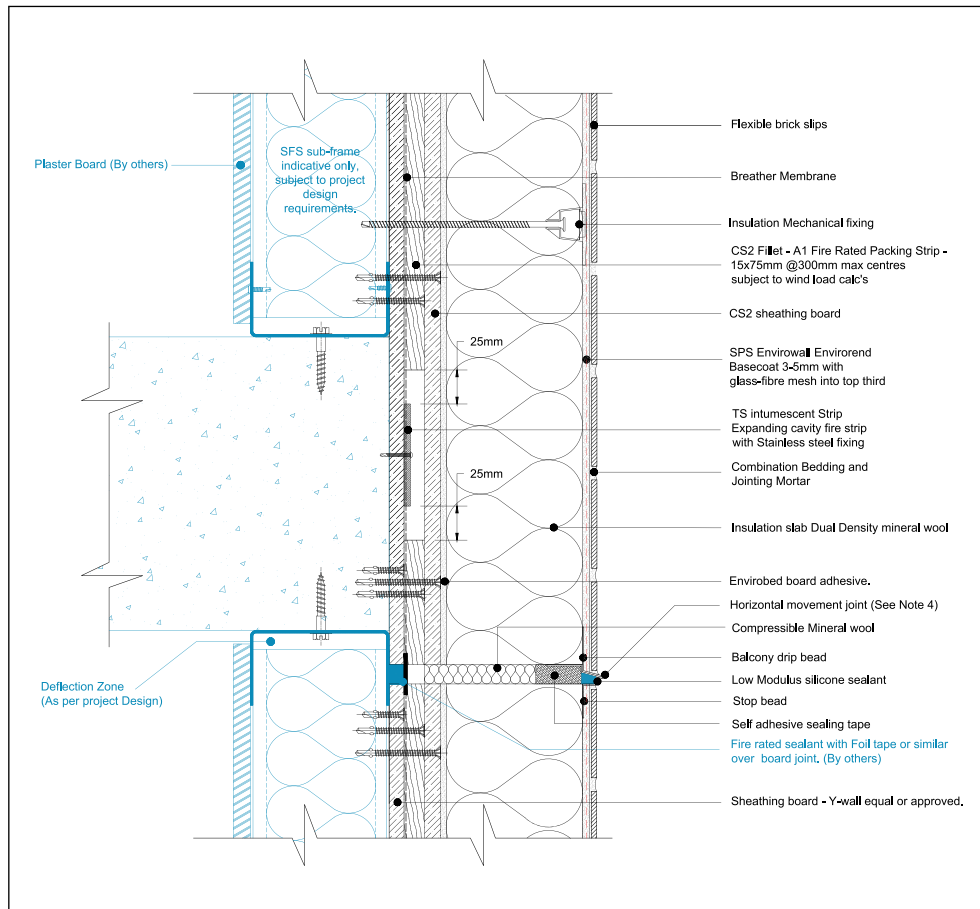


CS2 - Vertical Movement joint

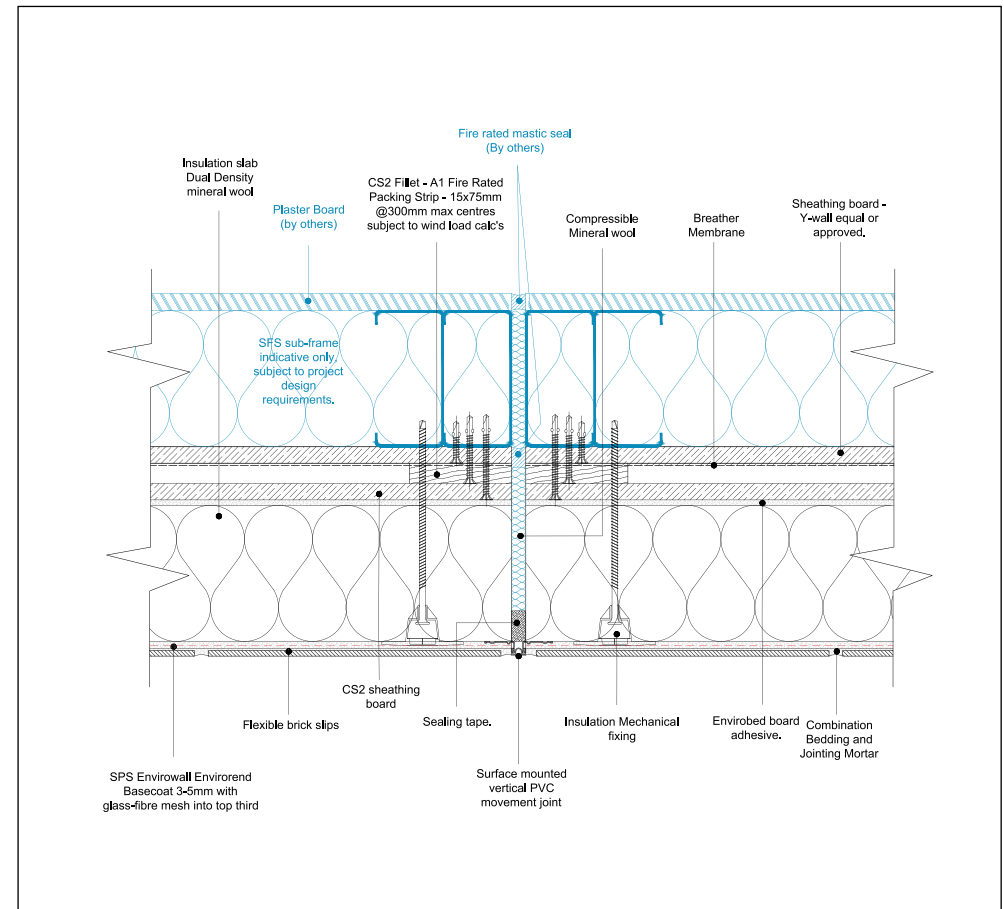


CS2 - Vertical Fire Barrier at Party Wall Compartment Junction

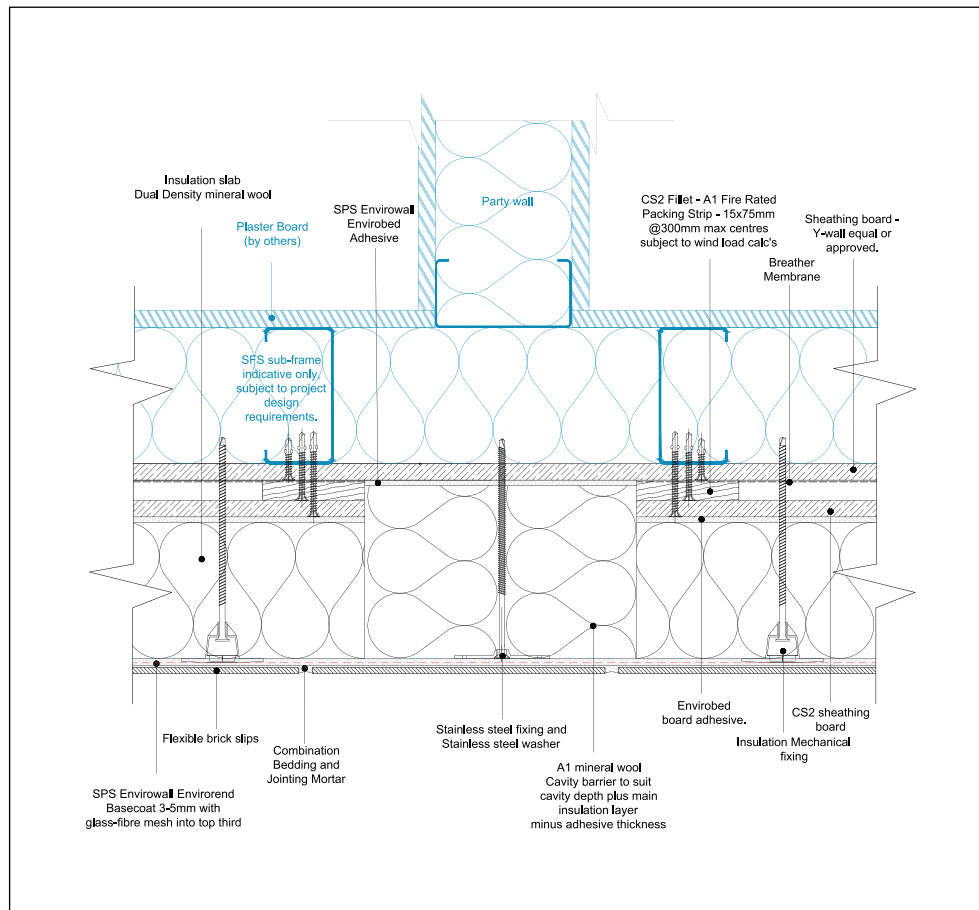


CS2 - Plan detail at party wall junction

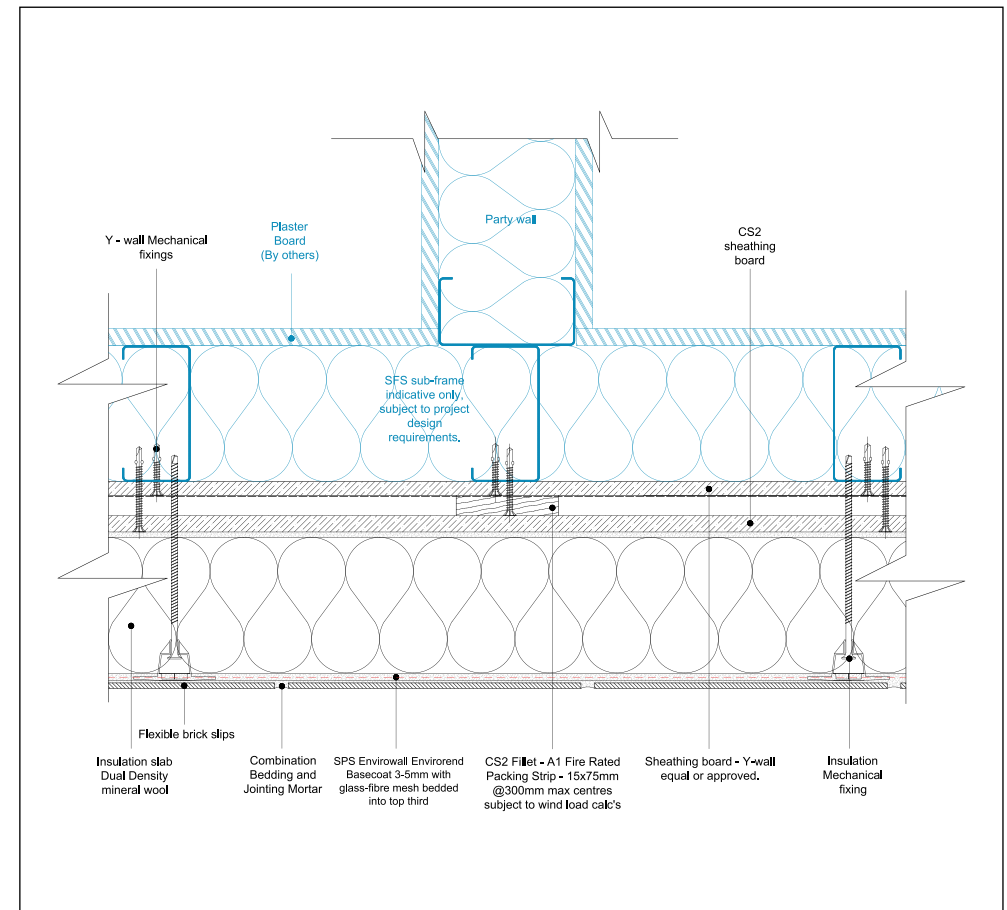


CS2 - Plan detail concrete section junction

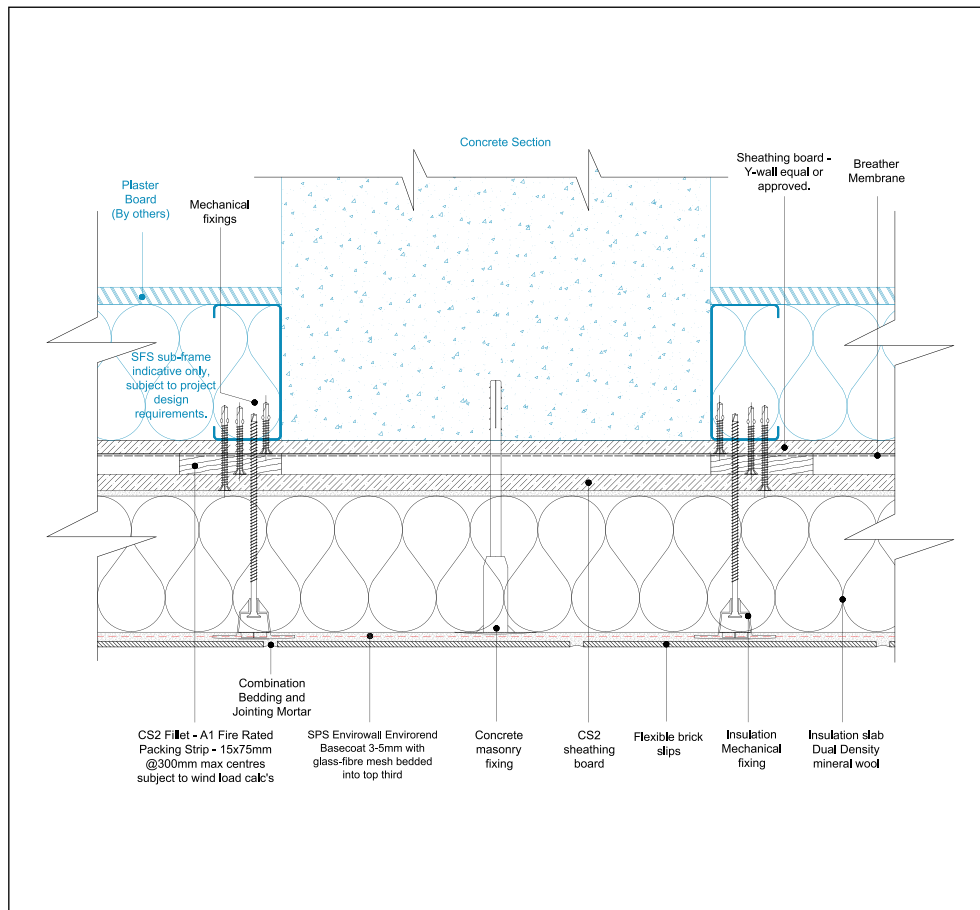


CS2 - Window Cill with CS2 A1 fillet cavity closure

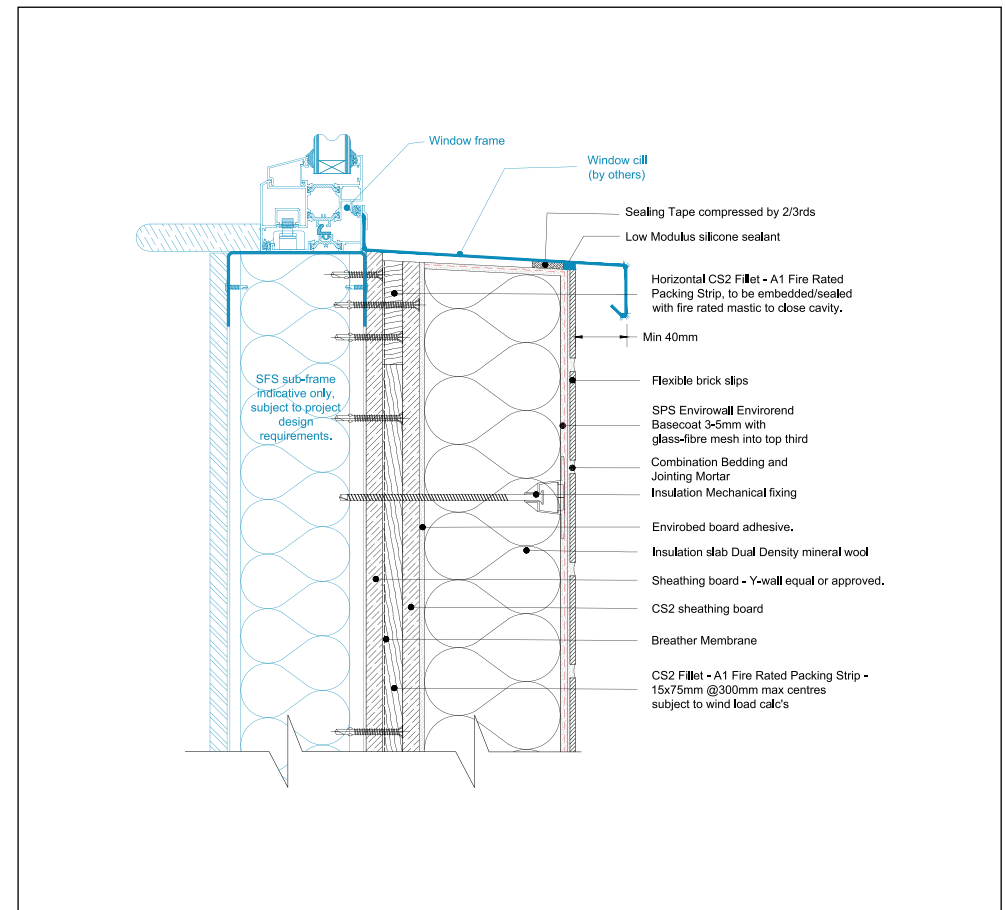


CS2 - Window Cill with Cavity barrier closure

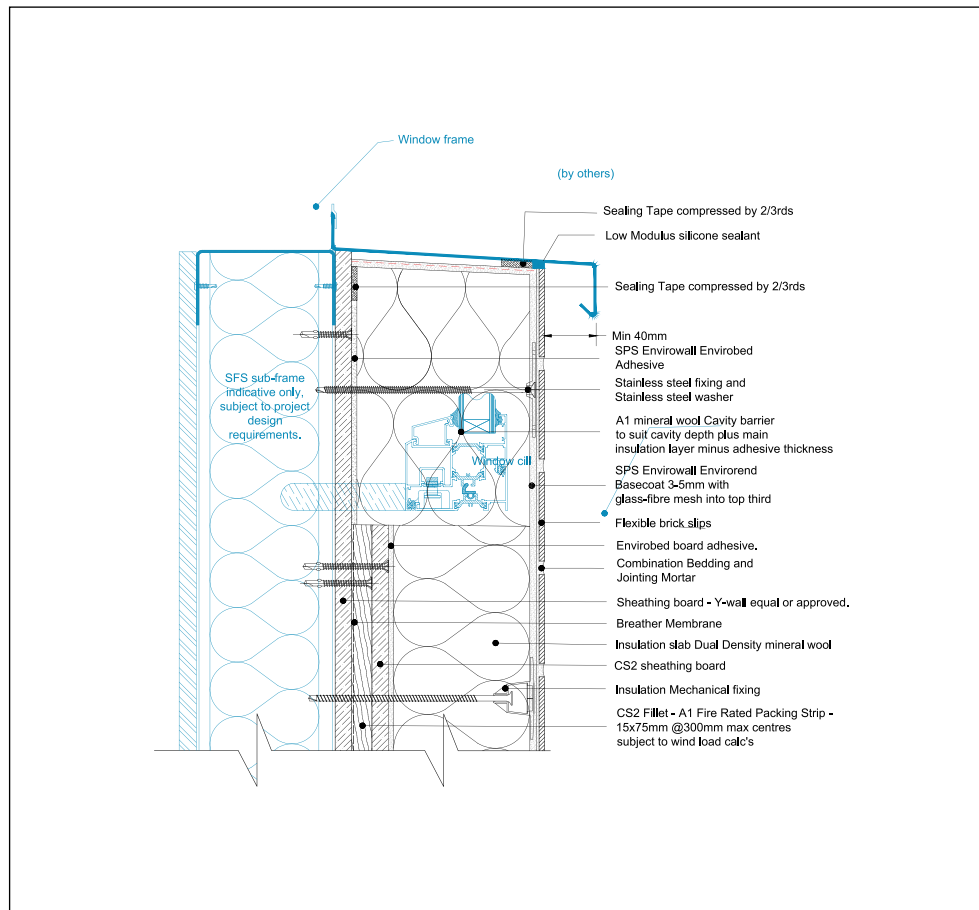


CS2 - Window Reveal with CS2 A1 fillet cavity closure

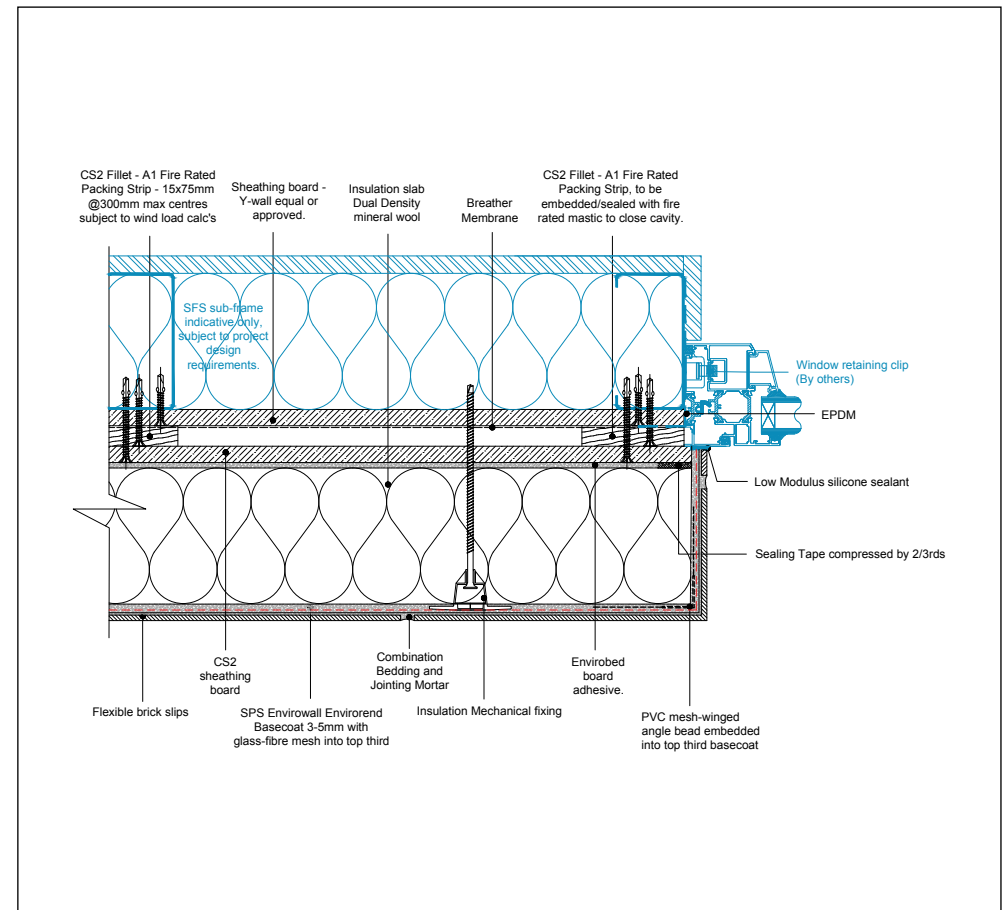


CS2 - Window Reveal with Cavity barrier closure

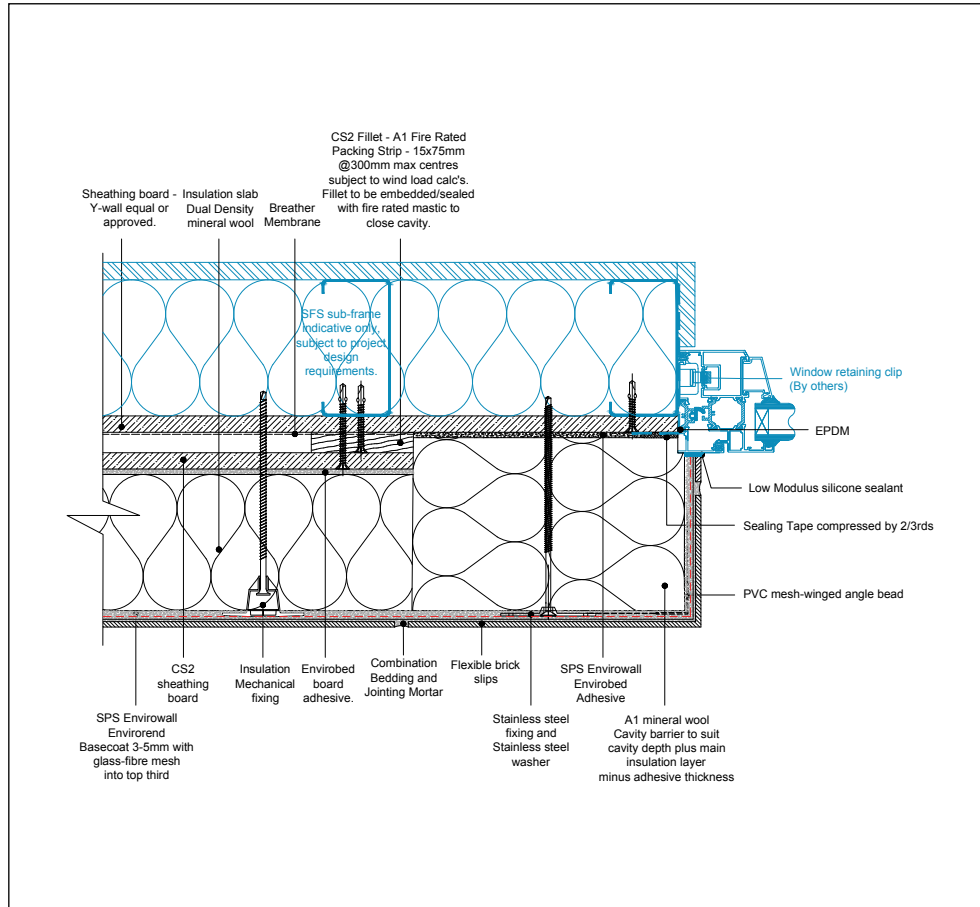


CS2 - Window Reveal with window set back

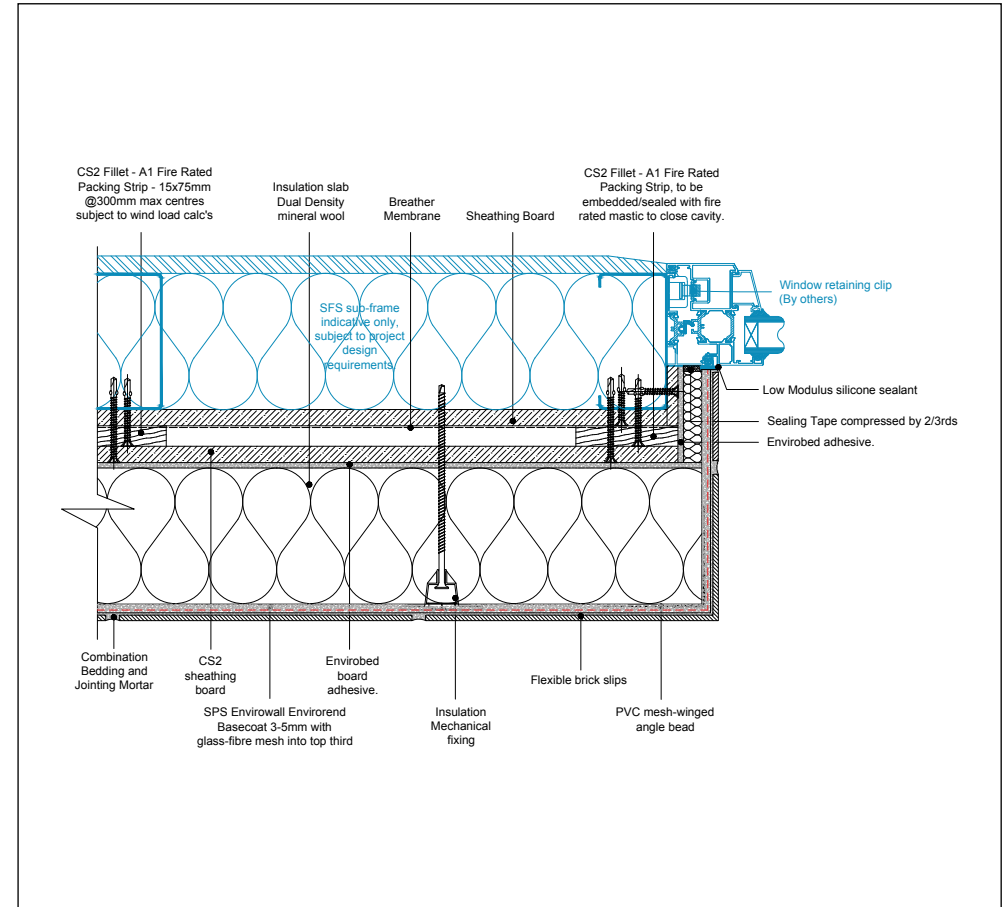


CS2 - Window Reveal with window set forward

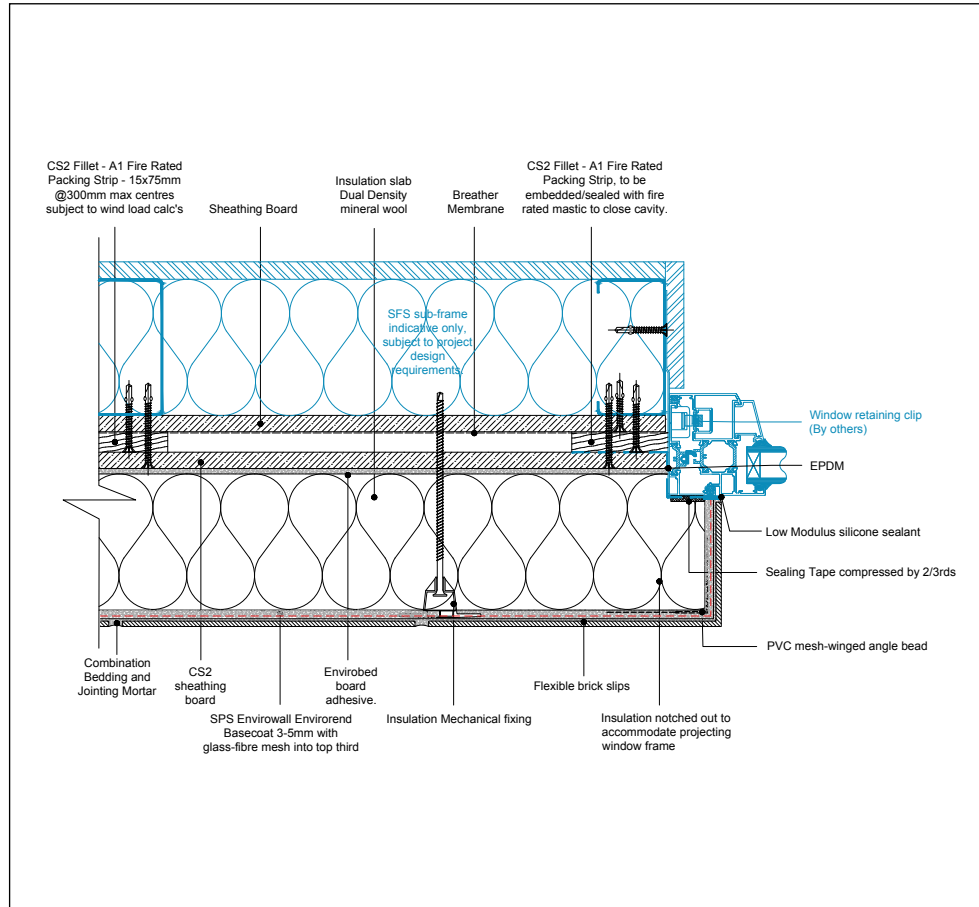


CS2 - Window Head with CS2 A1 fillet cavity closure

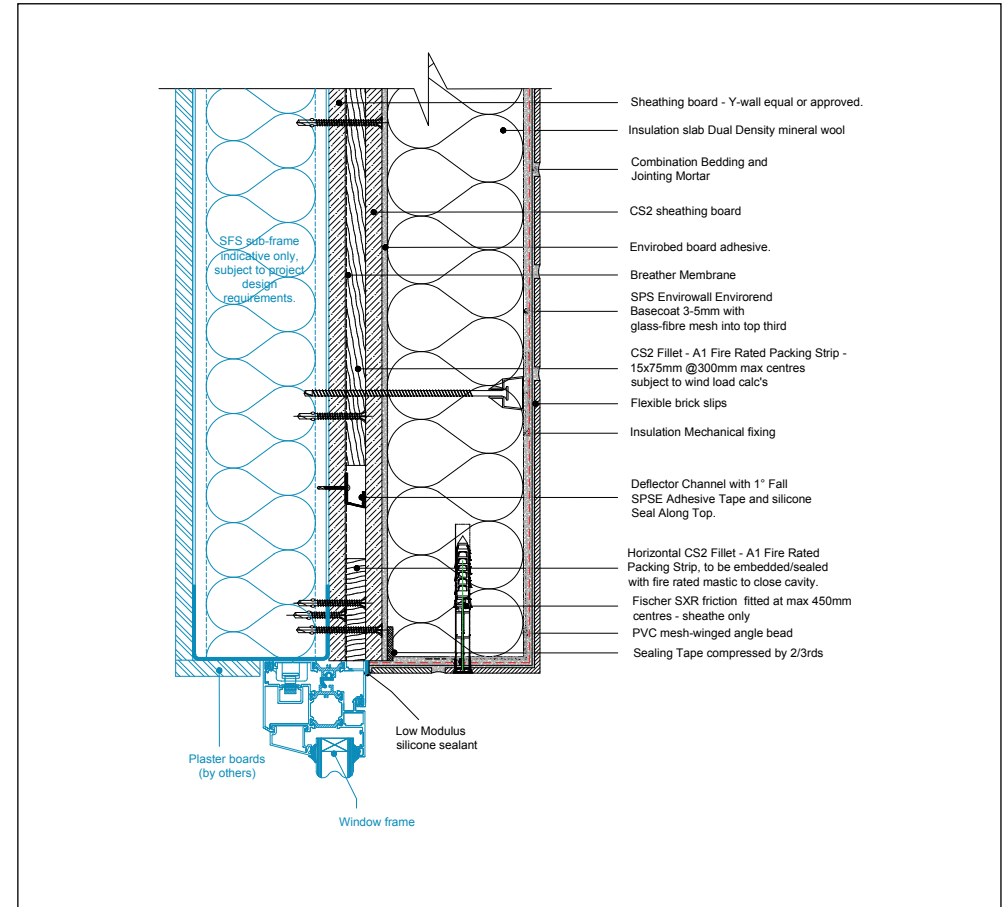


CS2 - Window Head with Cavity barrier closure

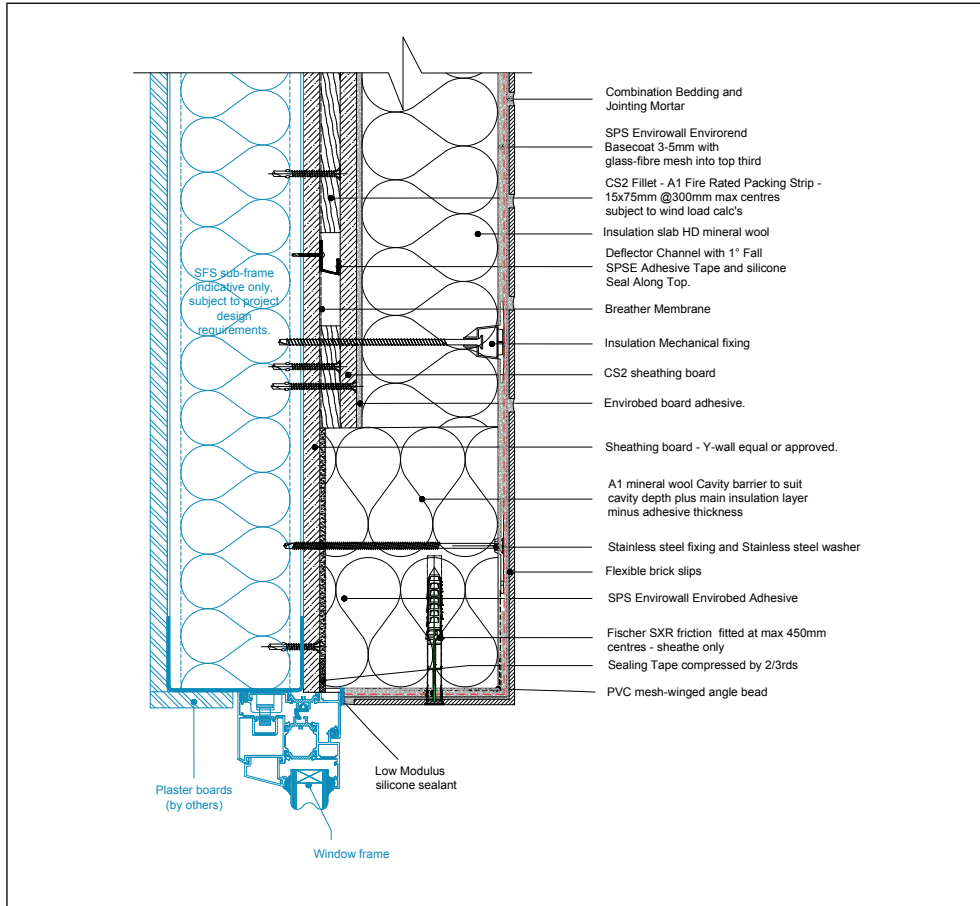


CS2 - Soffit Detail

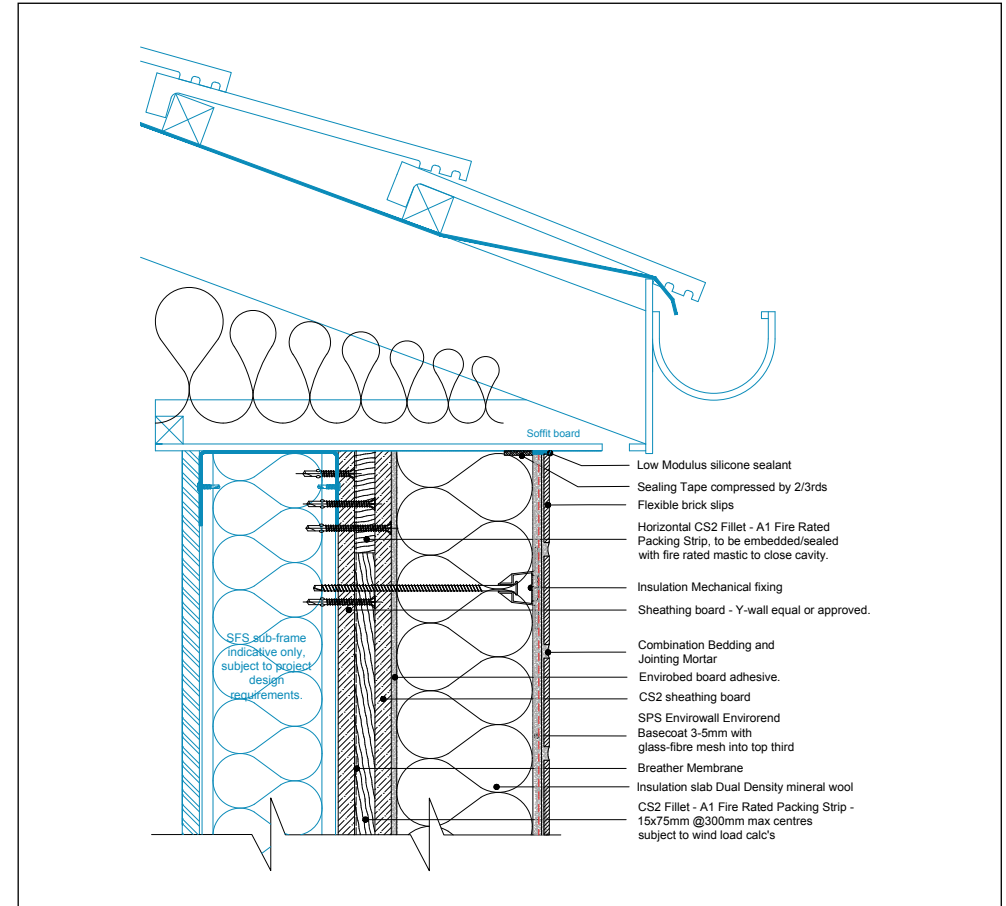


CS2 - Suspended soffit Detail

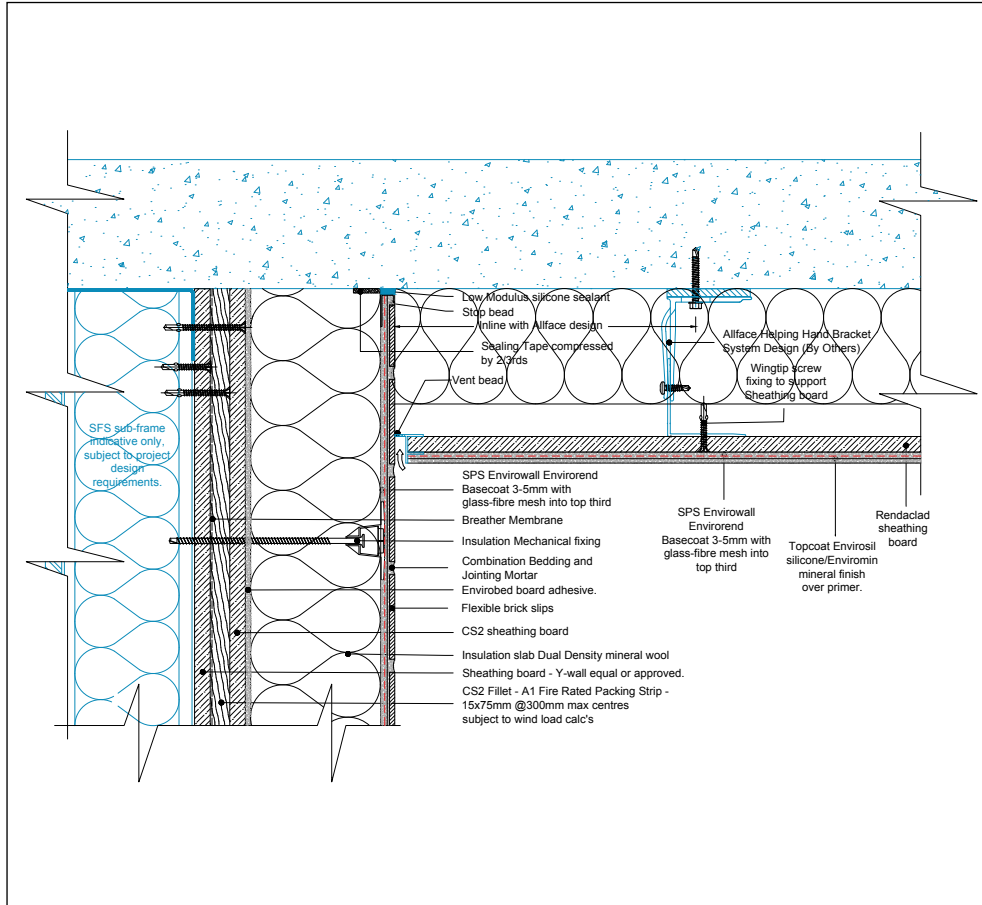


CS2 - Coping Detail

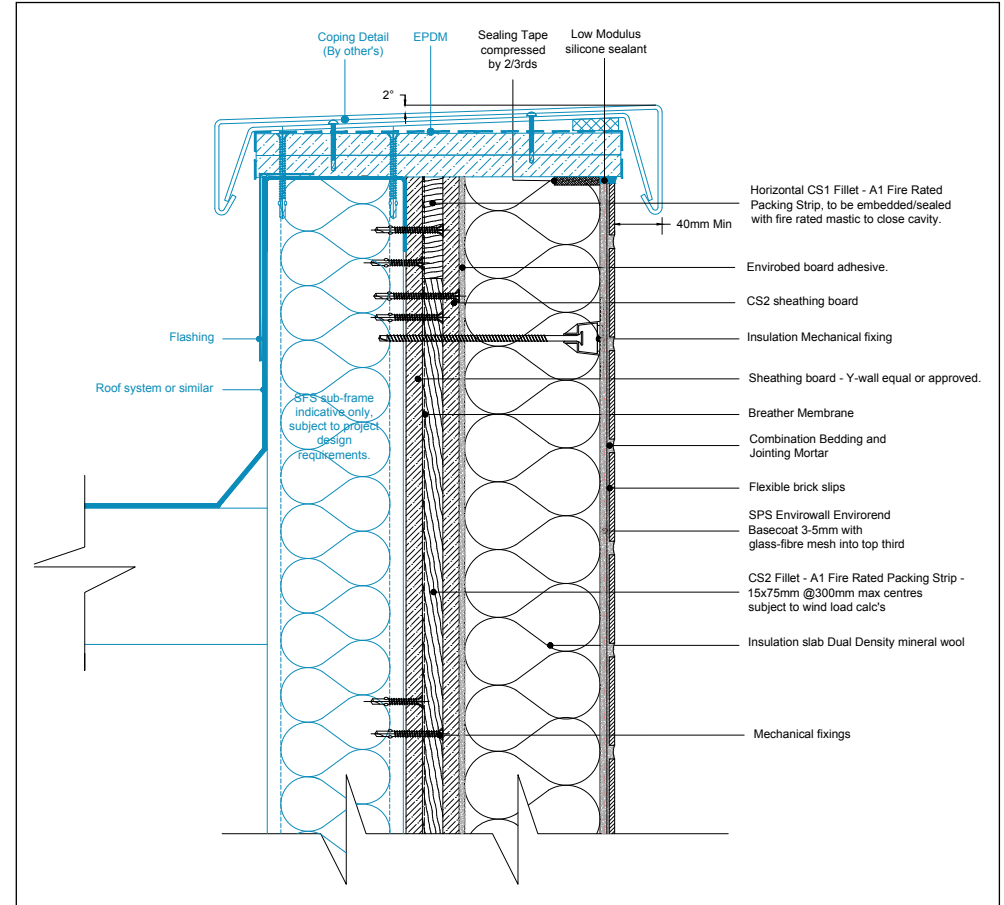


CS2 - Coping Detail with Mineral wool cavity stop

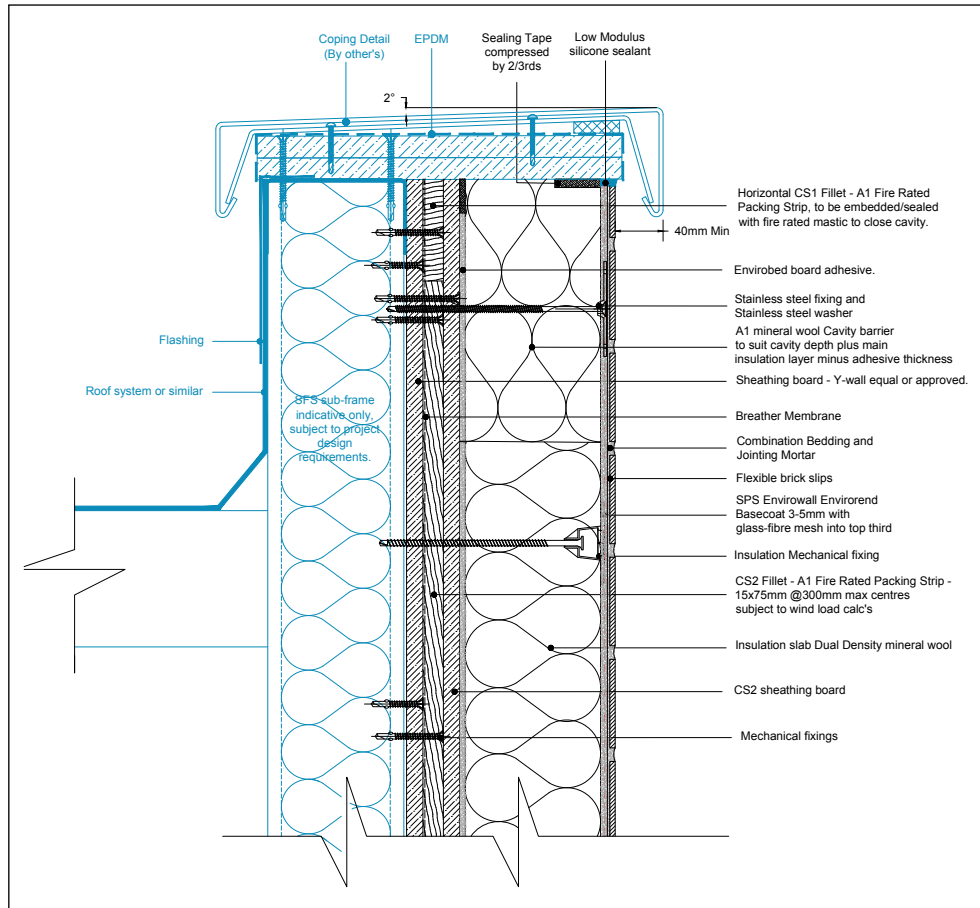


CS2 - Light weight mounting detail

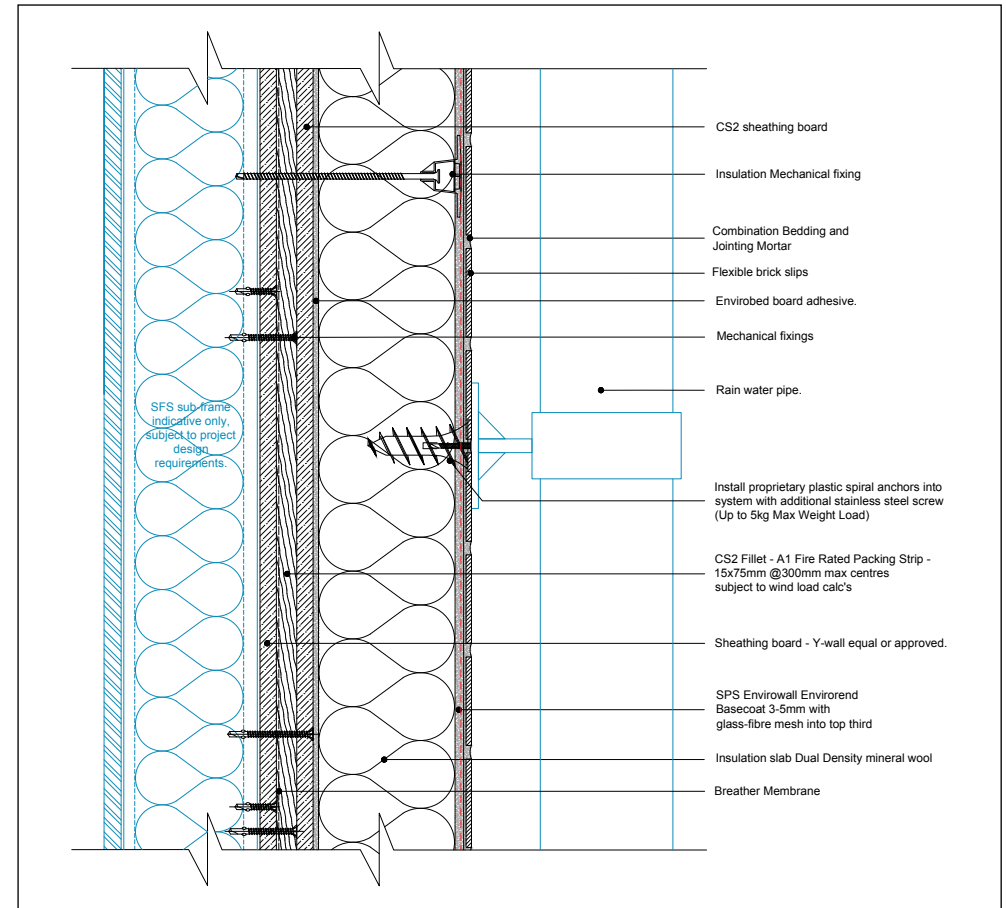


CS2 - Heavy duty Mounting Bracket

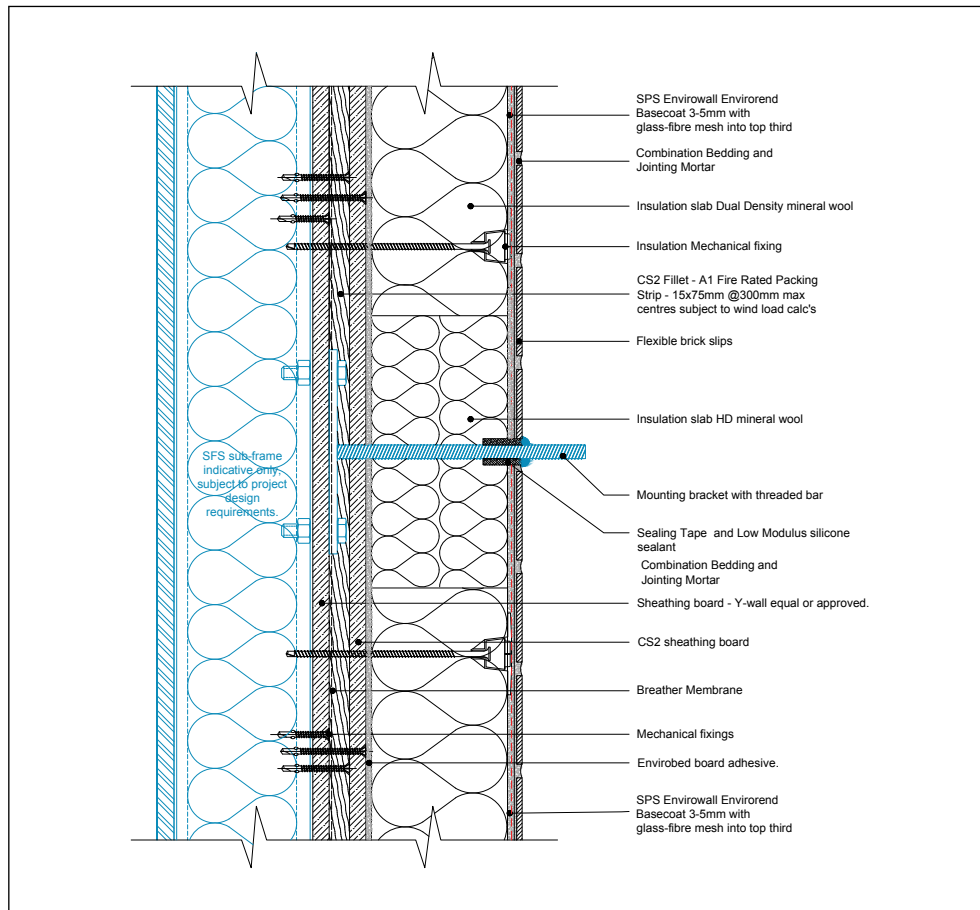


CS2 - Heavy duty Mounting Bracket

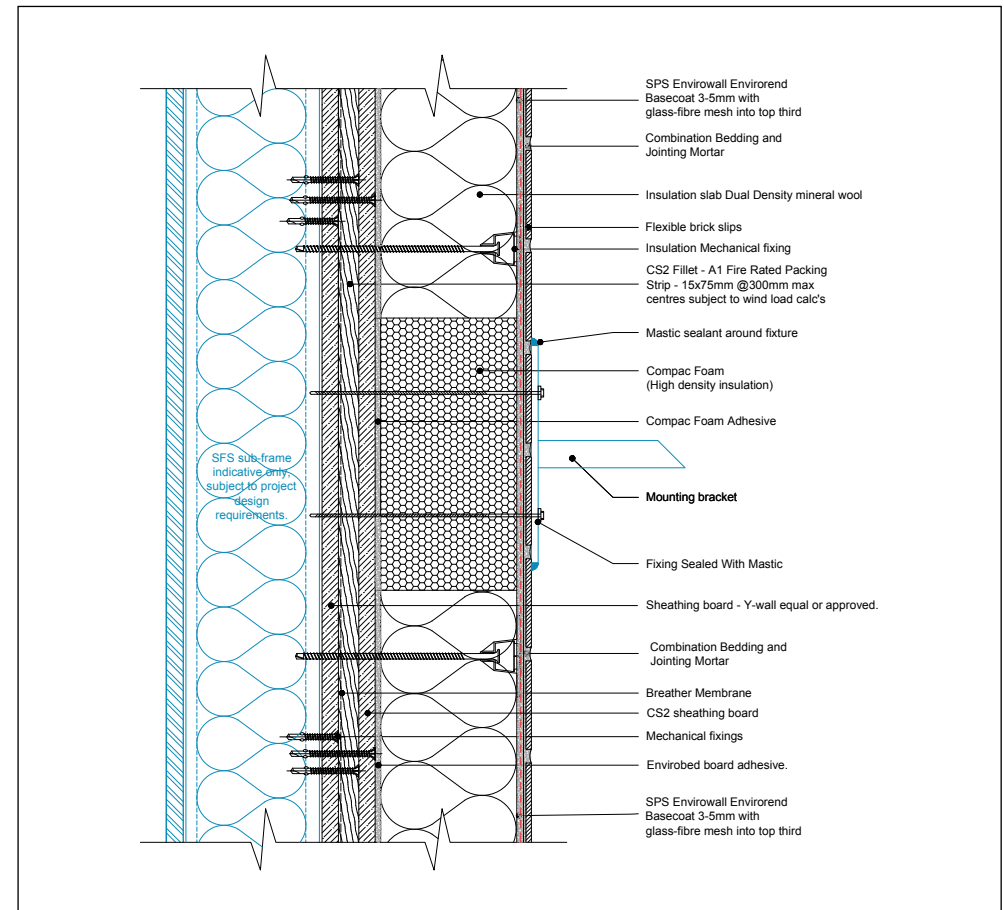


CS2 - Boiler Flue or extract fan details

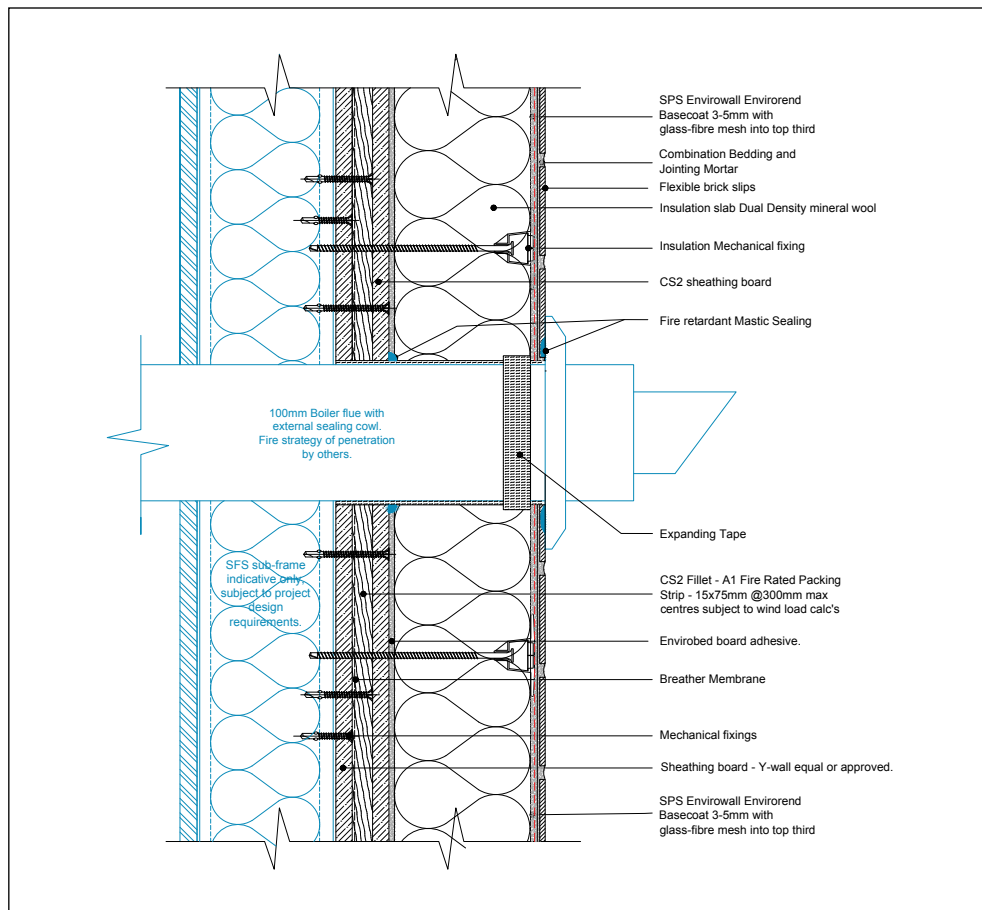


CS2 - Pipe or cable detail

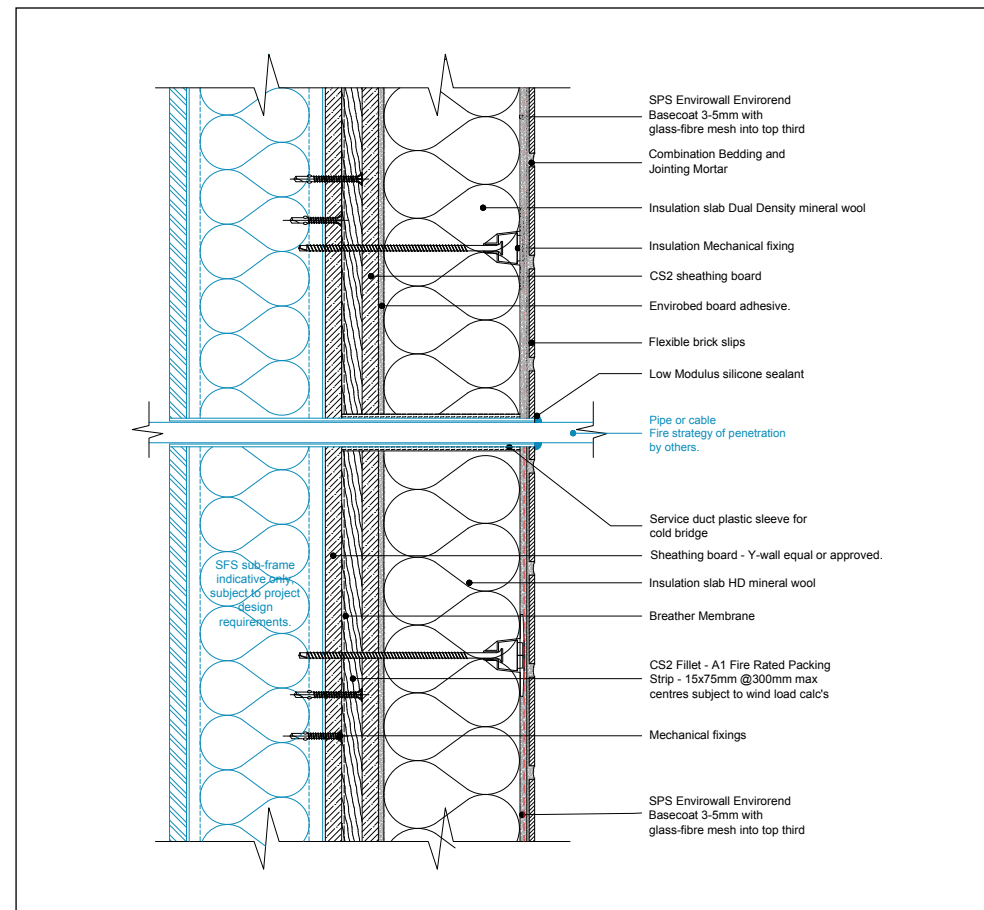


CS2 - Fixing Pattern Through Meshed Basecoat

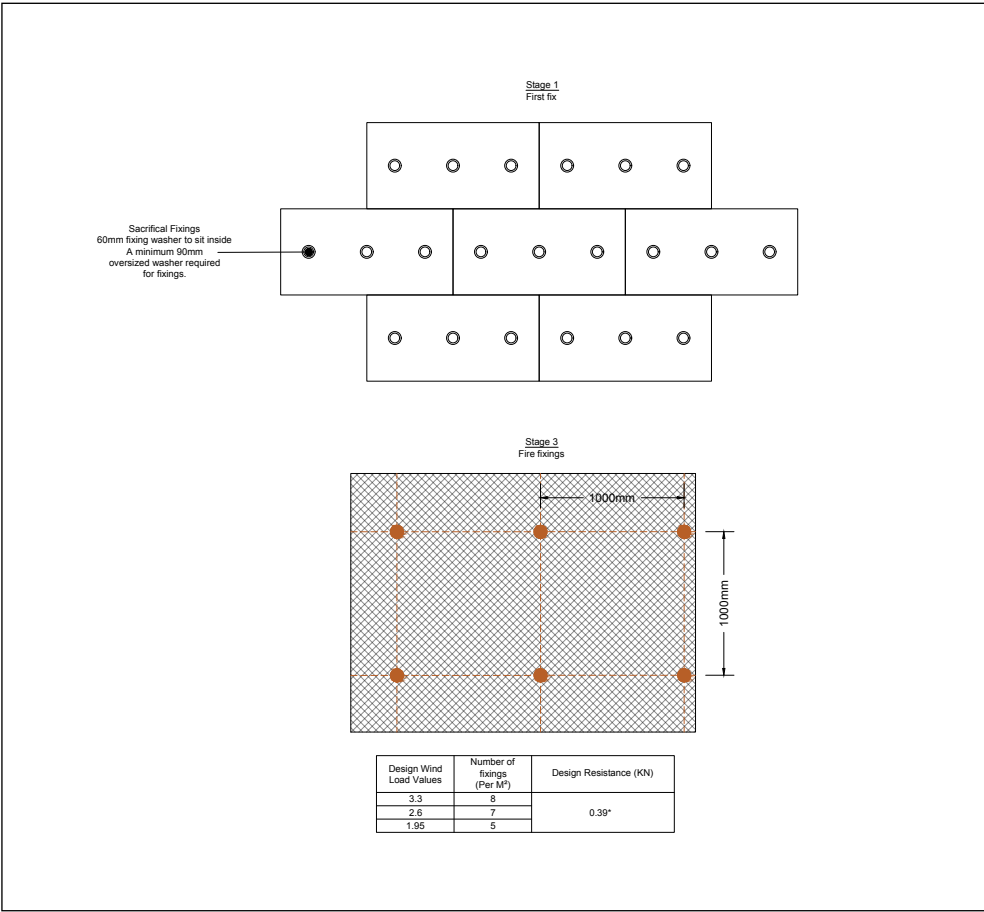


CS2 - Fixing Pattern Through Meshed Basecoat

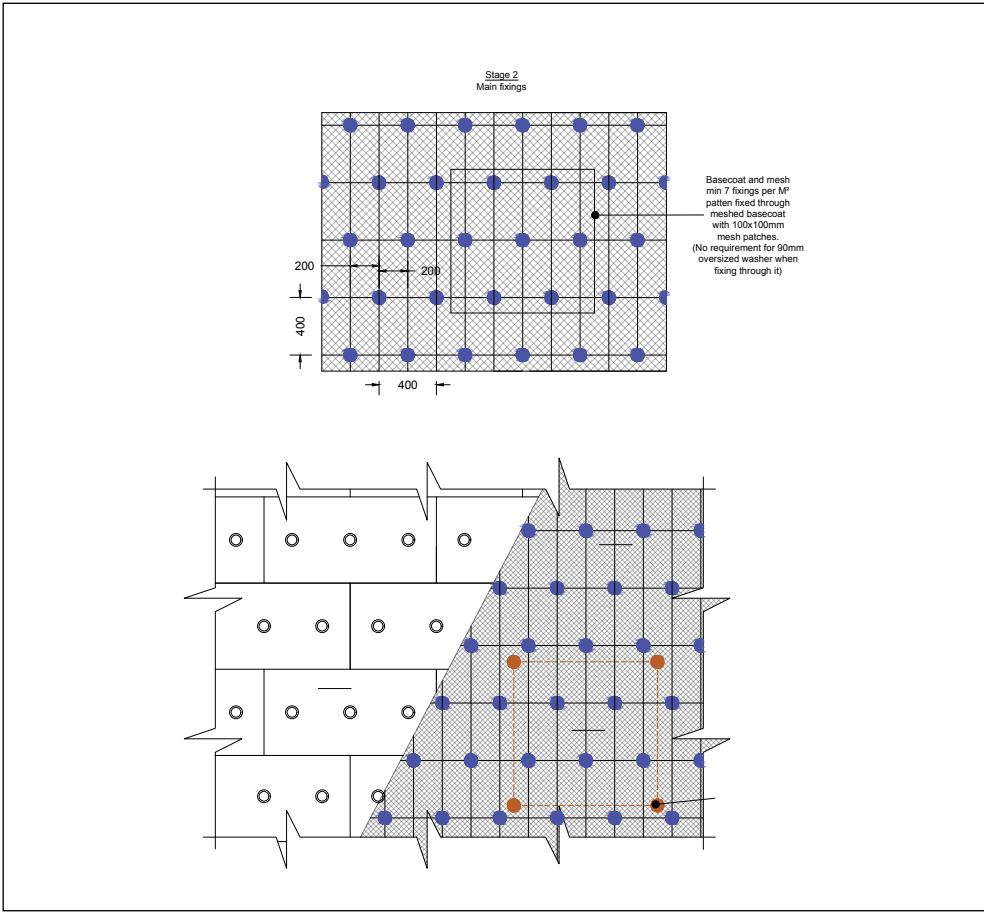


CS2 - Stress patches

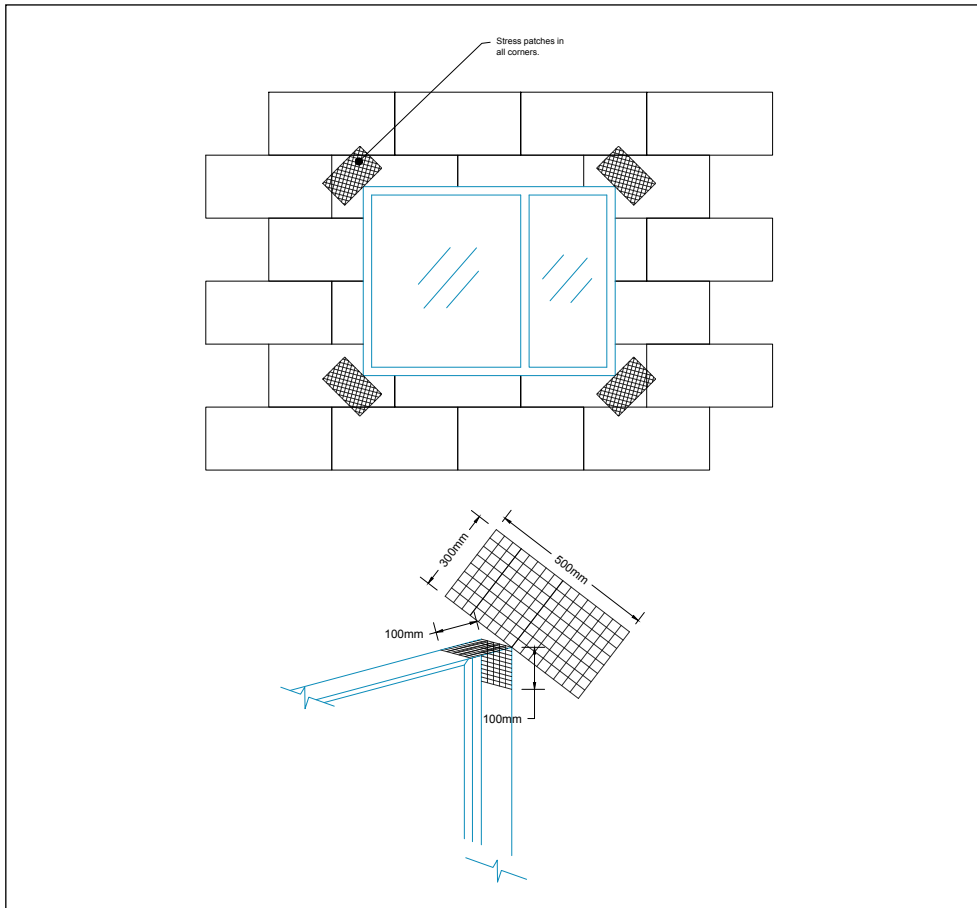


CS2 - Fillet fixing details

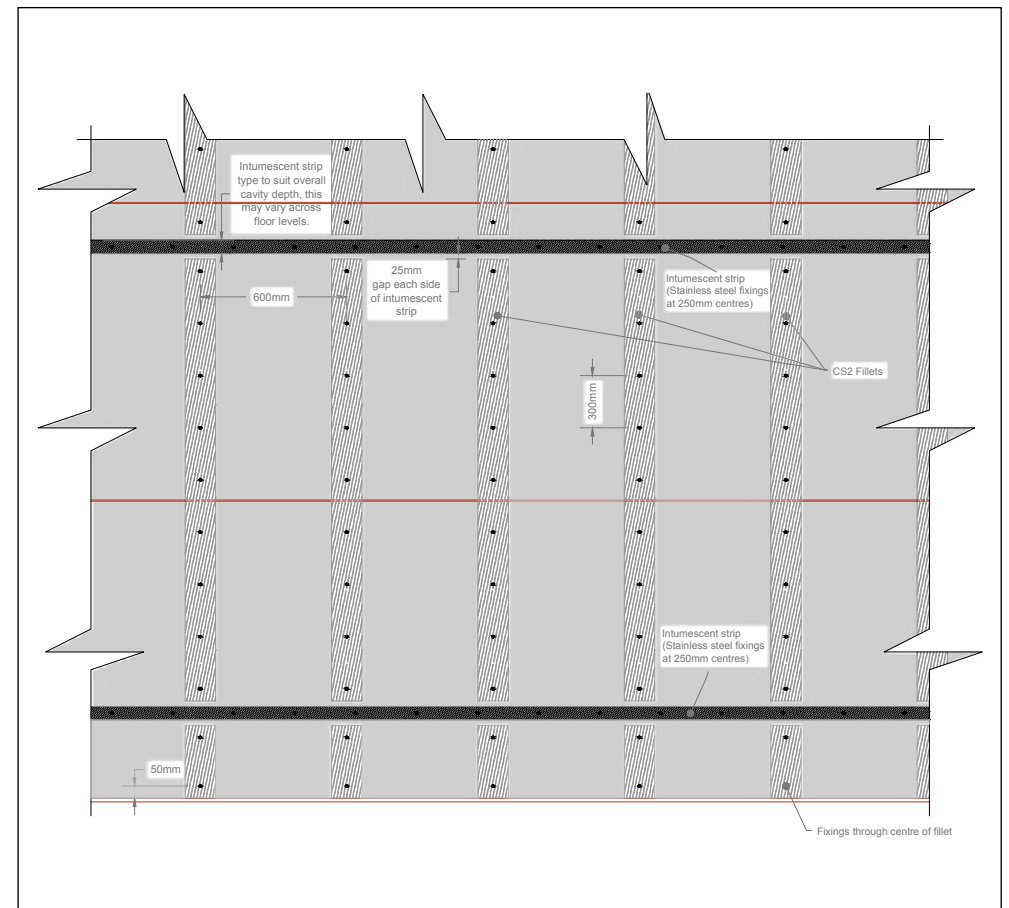

CS2 - Fillet fixing detail around large window

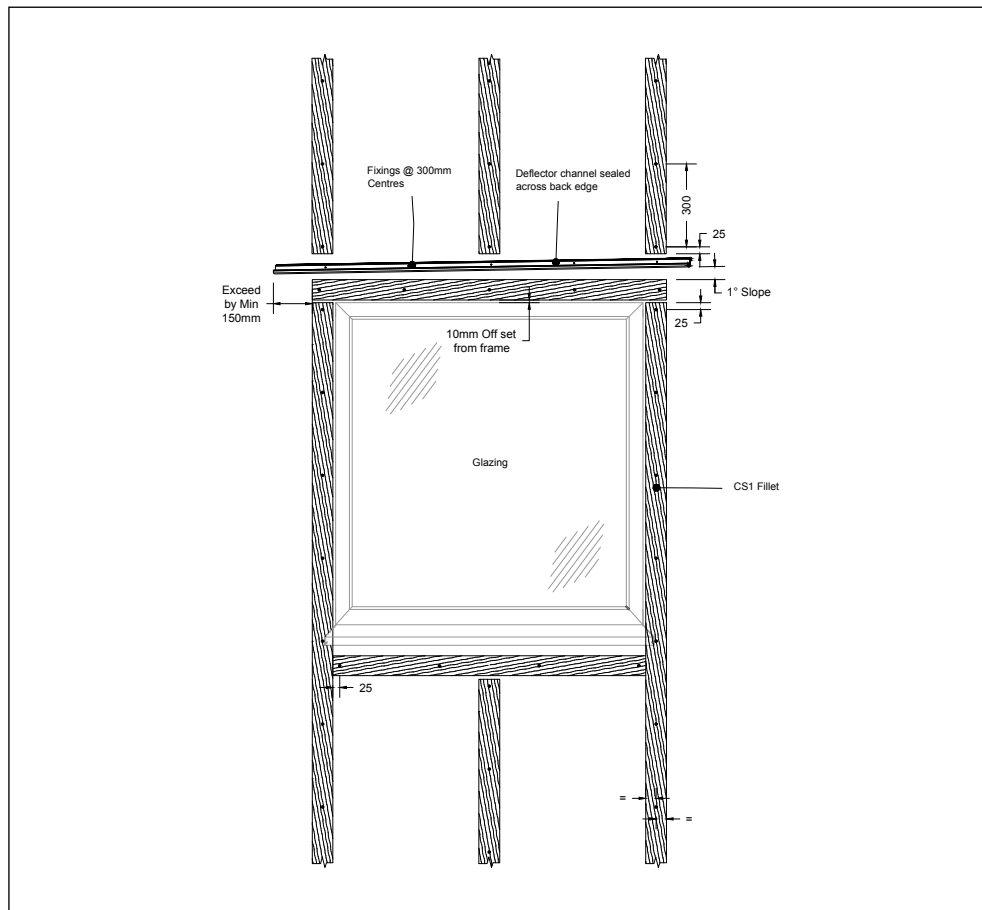

CS2 - Fillet fixing detail around small window

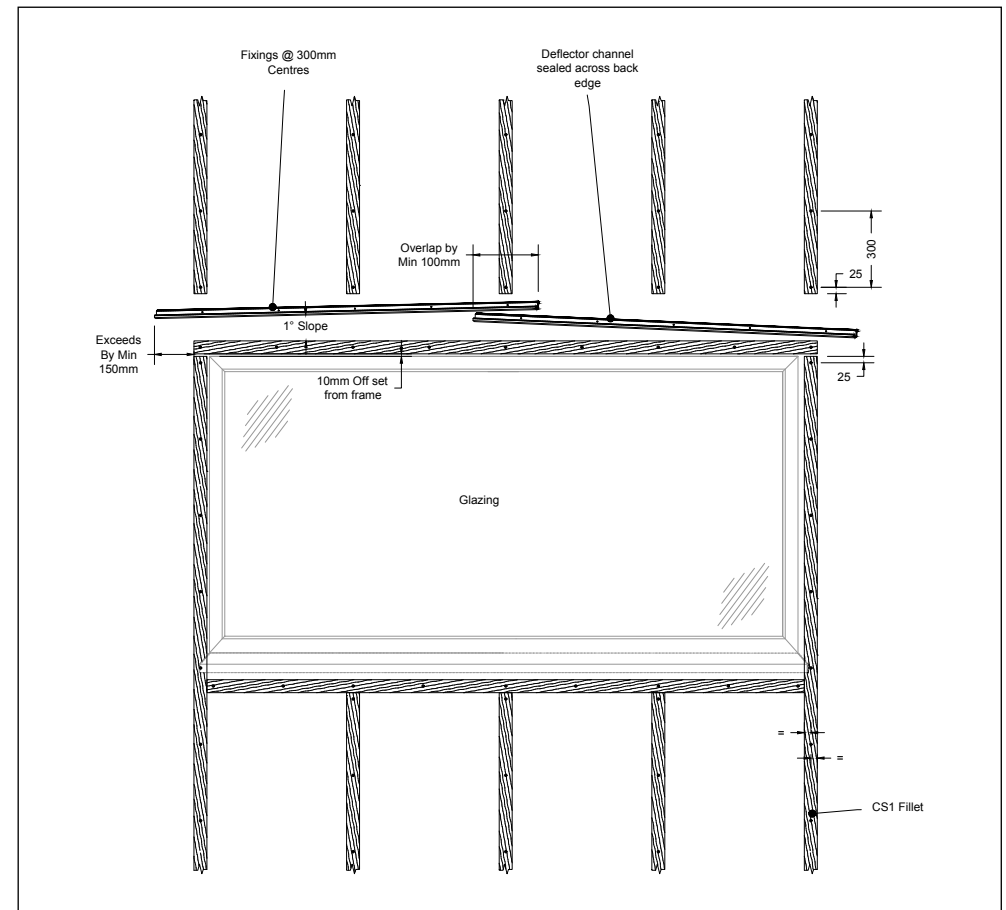

Information

For sales/samples call: 0800 612 4662 sales@benx.co.uk
For technical call: 0800 612 4662 technicalservices@benx.co.uk
technicalservices@benx.co.uk www.benx.co.uk



Cavity System 2
Product Information



Cavity Systems
Brochure



Cavity System 2
KIWA Certificate for
Mineral Wool with Flexislip



Cavity System 2
KIWA Certificate for
Render



Cavity System 2
KIWA Certificate for
Speedy Slip



Fire Rated: A1/A2-s1,d0



STRUCTURAL
TIMBER ASSOCIATION
Building offsite solutions in timber

© 2023 BENX Limited. RCM, SPS Envirowall are registered trademarks of BENX. All rights reserved.
See www.benx.co.uk

